



Tools required: #3 (large) Phillips Head Screwdriver



Step 1: Unlock the unit and open the tray to access the locks.



Step 2: Remove the old lock and/or housing by removing the pan head screw from the rear of the lock. Keep the screw and lockwasher for re-use.



Step 3: Remove the old lock and/or housing.



Lock tab

Step 4: Install the new lock with the **lock tab** oriented in the up position. Fasten securely with the Phillips head screw.