



- ① Slide Hanger Clips into top track of banner hanger.

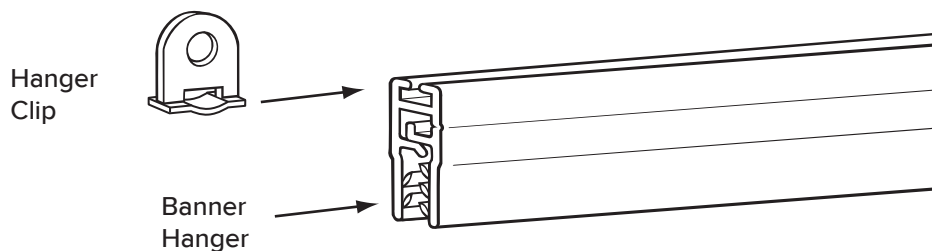

- ② Start at one end of banner hanger. Pry open hinged side. Work your way down until banner is open. Insert banner hanger, snap shut to lock banner in place.

NOTE: See illustration at right to determine how far to insert banner into banner hanger. Inserting banner too far into banner hanger may damage its hinge.

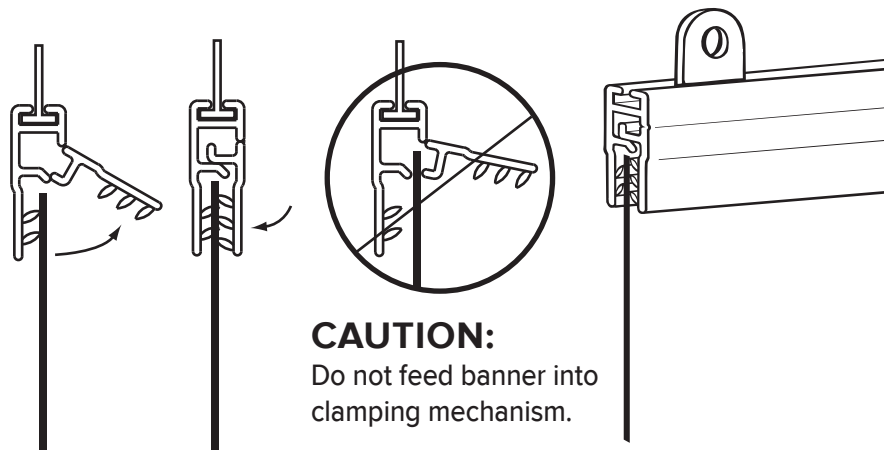

- ③ Unwind the barbed cord of the CGH Universal Plastic Ceiling Hook. Tie barbed end of cord to Hanger Clip. Hang from ceiling as desired. Installation is complete.

