

NOTE: Install Power Zone® Pre-Set® Extra Narrow Self-facing Kit left to right. Place pre-assembled unit on left edge of shelf and line up holes at front of Power Zone® unit with holes of shelf.

TIP: If front and rear rails are not even on the left-most part of the shelf, gently tap left end of Power Zone® unit on the floor to even them.

TIP: Begin placing the pusher fixture(s) at the bottom-most left side of the plan-o-gram area. If installing on multiple shelves on the same fixture, work bottom to top and work left to right.

TIP: During installation, once pusher fixture is placed on shelf, test tallest product for easy removal relative to above shelf. If product is too close to shelf above, reposition as needed.

- Notice that the rear rail has non-skid material located underneath, to help unit stay in place on shelf.
- Secure Power Zone® Kit to shelf by inserting fasteners through holes in front rail and shelf. (2 per unit included). To unfasten from shelf, simply lift up assembled unit and fasteners will disengage from shelf.

- The left end divider has two adhesive pads. Remove liner and adhere to left edge of Power Zone® front and rear rails.
- Starting with first row on the left end of the Power Zone® Kit, slide pusher track/divider to match width of product. Load first row of product. Repeat this step until you reach right edge of Power Zone®.
- Place next Power Zone® Kit on top of store shelf.

 NOTE: The left end divider is not needed when connecting two units together. Line up Power Zone® front and rear rails with previously installed Power Zone® Kit. Align holes in front rail with shelf holes. Secure with fasteners.
- The last pusher track/divider will be used as the right end divider.
- To add or remove pusher track/dividers, slide track/divider into or out of the front and rear rails from the right end of the kit.

