
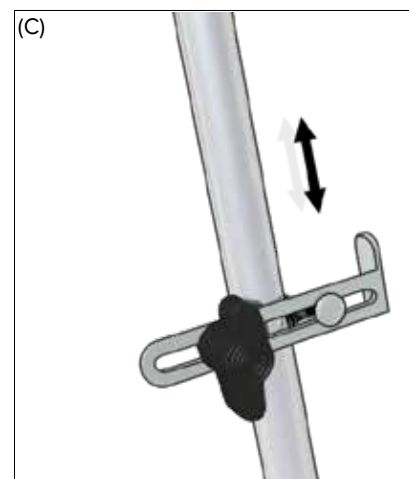
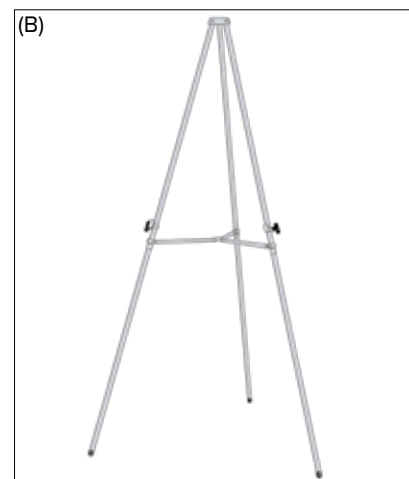


1. Adjust telescopic leg length (fig. A).
2. Open easel (fig. B).
3. Adjust lower easel card supports (fig. C).

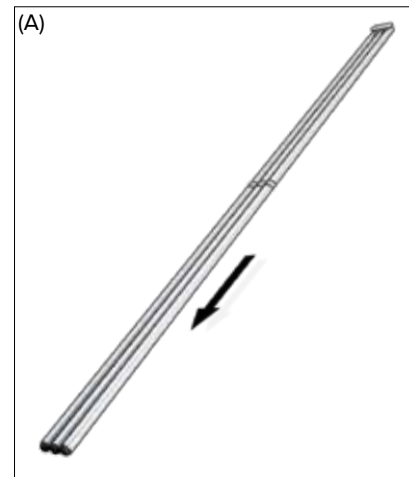

20190517