


### INSTALL


①

Insert hooks into pegboard and follow your plan-o-gram layout.

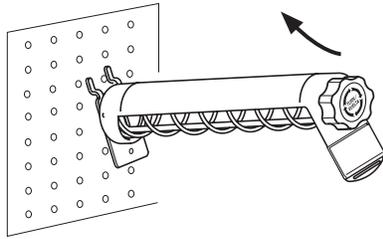

②


Allow enough space between the displays so that product does not touch the surface below or obstruct other merchandise.

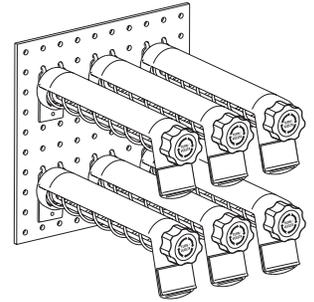

### LOCK DOWN


③

Insert the Lock Down Plate into the holes directly below the unit. Rotate up into place, until the screw inserts into back plate.

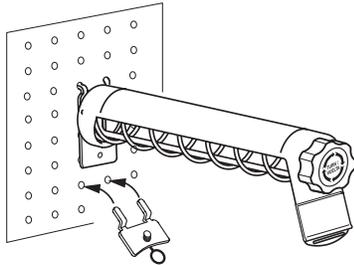

④


Tighten screw with a Phillips Head Screwdriver. Close Screw Cover Cap when finished.

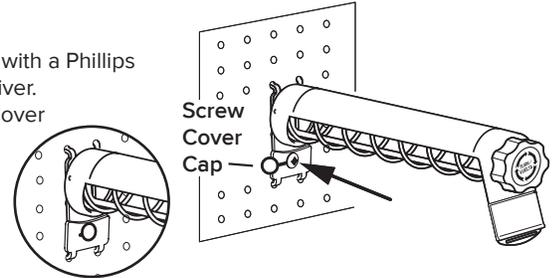

### LOADING MERCHANDISE

⑤

Insert the merchandise by following the ramp upwards until product stops, then turn the knob counter clockwise until product catches hook.

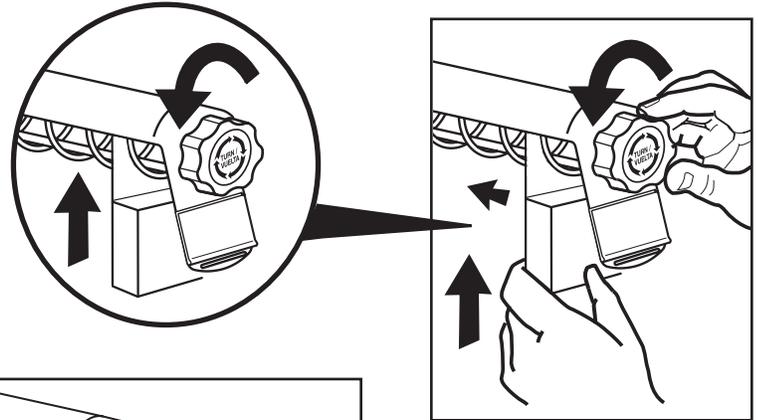

**Thin packages:**  
**ONE COMPLETE ROTATION** provides the position for loading the next package.



**Thick packages:**  
**TWO COMPLETE ROTATIONS** are required.

Repeat Steps 5 and 6 for loading the rest of the merchandise.




**ATTENTION:**  
Keep product faced to the front.



**WARNING:** Do not overturn coil. Product will go all the way off the rear of the coil and become inaccessible.

⑥

Open window and insert price label.

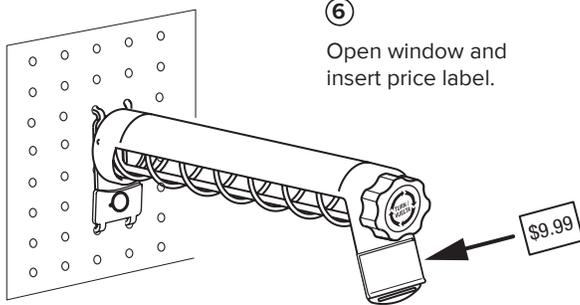

### DISPENSING MERCHANDISE

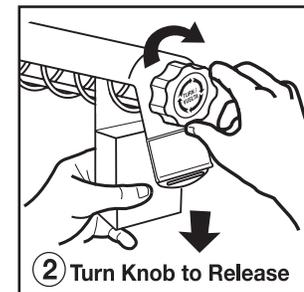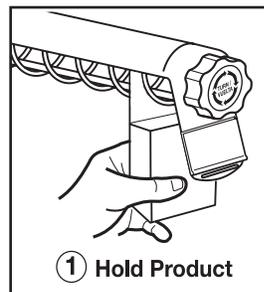


20190311

## INSTALLER


①

Insérez les crochets dans les panneaux perforés et suivez votre configuration de planogramme.

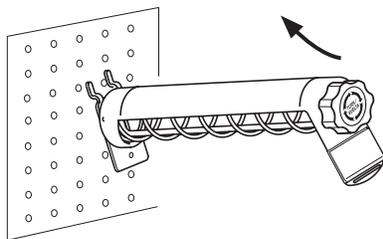

②


Laissez suffisamment d'espace entre les affichages afin que le produit ne touche pas la surface en dessous ni ne bloque d'autres marchandises.

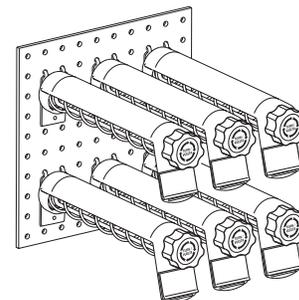

## VERROUILLER


③

Insérez la plaque de verrouillage dans les orifices se trouvant directement en dessous de l'unité. Faites pivoter en position jusqu'à ce que la vis soit insérée dans la plaque arrière.

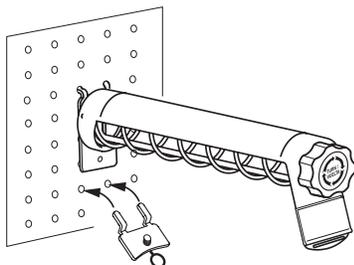


④

Serrez la vis à l'aide d'un tournevis cruciforme. Fermez le capuchon de la vis une fois terminé.

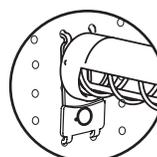

Vissez le capuchon de la vis

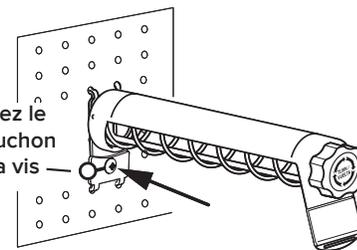

## CHARGER LA MARCHANDISE

⑤

Insérez la marchandise en suivant la rampe vers le haut jusqu'à ce que le produit s'arrête, puis tournez le bouton **dans le sens contraire des aiguilles d'une montre** jusqu'à ce que le produit s'enclenche dans le crochet.





**UN TOUR COMPLET** offre la position adéquate pour le chargement du prochain emballage.



**Emballages épais :** **DEUX TOURS COMPLETS** sont nécessaires.

Répétez les étapes 5 et 6 pour le chargement du reste de la marchandise.

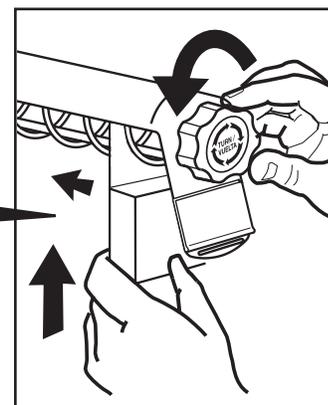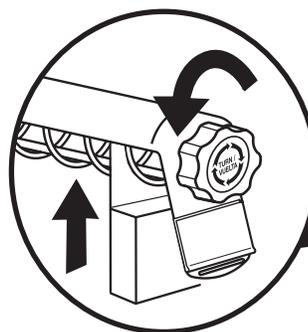



**ATTENTION :** Maintenez le produit en position frontale.

**AVERTISSEMENT :** Ne pas trop faire tourner la bobine. Le produit sortira entièrement de l'arrière de la bobine et deviendra inaccessible.


## DISTRIBUER LA MARCHANDISE

⑥

Ouvrez la fenêtre et insérez l'étiquette du prix.

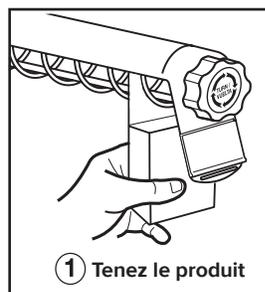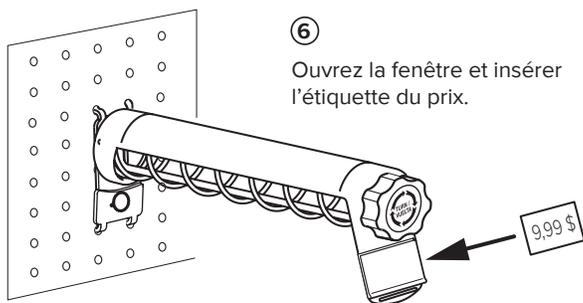

① Tenez le produit

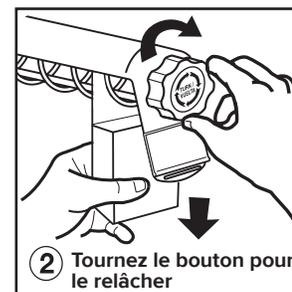

② Tournez le bouton pour le relâcher

20190311