

THIS UNIT IS NOT DISHWASHER SAFE.

PLACING THE UNIT INTO A DISHWASHER COULD CAUSE SIGNIFICANT DAMAGE.


NORMAL USE AND CARE:

- Clean blades after every use.
- Avoid contact with the blades and other hard objects or surfaces.
- Exercise caution while handling and cleaning the blades to avoid injury.
- Dry blades completely after washing.

Parts List	
ITEM	DESCRIPTION
1	BASE
2	PUSH HANDLE
3	QUICK-RELEASE PIN
4	PEELING BLADE
5	PUSH ROD

CLEANING INSTRUCTIONS:

1. Set pineapple corer on a towel near sink (to keep suction cups from sticking to sink surface).
2. Remove push-rod (5) from top of unit.
3. Push handle (2) ALL THE WAY DOWN until blades rest on base (1).
4. Remove both quick-release pins (3), allowing peeling blade (4) to rest on base (1).
5. Clean push-rod (5) and peeling blade (4) in **3-compartment sink** first:
 - a. Use **one sink** to wash parts in a detergent solution that is a minimum of 110°F. Change solution regularly.
 - b. Use brush, cloth or nylon scrub pad to loosen particles.
 - c. Rinse parts thoroughly in a **second sink**. Ensure all food and detergent is completely removed.
 - d. Sanitize parts in a **third sink**, soaking in hot water or sanitizing solution.
 - e. Air-dry all parts on a rack.
6. Place the rest of the machine (without push-rod and peeling blade) in **3-compartment sink** (place machine sideways to avoid suction cups sticking to the bottom of the sink):
 - a. Use **one sink** to wash machine in a detergent solution that is a minimum of 110°F. Change solution regularly.
 - b. Use brush, cloth or nylon scrub pad to loosen particles.
 - c. Rinse machine thoroughly in a **second sink**. Ensure all food and detergent is completely removed.
 - d. Sanitize machine in a **third sink**, soaking in hot water or sanitizing solution.
 - e. Air-dry machine with other parts.
7. Reassemble parts when dry.

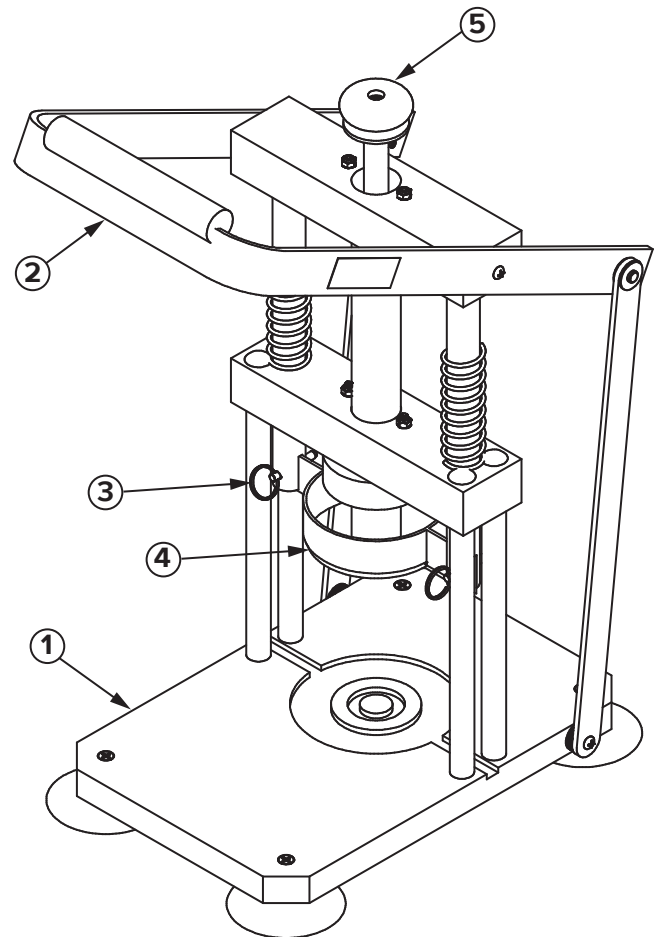

20190515