


- 1** **NOTE:** Install Power Zone® Pre-Set™ Self-facing System left to right. Place pre-assembled unit on left edge of shelf and line up holes at front of Power Zone® unit with holes of shelf.

TIP: If front and rear rails are not even on the left-most part of the shelf, gently tap left end of Power Zone® unit on the floor to even them.

TIP: Begin placing the pusher fixture(s) at the bottom-most left side of the plan-o-gram area. If installing on multiple shelves on the same fixture, work bottom to top and work left to right.

TIP: During installation, once pusher fixture is placed on shelf, test tallest product for easy removal relative to above shelf. If product is too close to shelf above, reposition as needed.
- 2** Notice that the rear rail has non-skid material located underneath, to help unit stay in place on shelf.
- 3** Secure Power Zone® to shelf by inserting fasteners through holes in front rail and shelf. (3 per unit included). To unfasten from shelf, simply lift up assembled unit and fasteners will disengage from shelf.
- 4** The left end divider has two adhesive pads. Remove liner and adhere to left edge of Power Zone® front and rear rails.
- 5** Starting with first row on the left end of the Power Zone® System, slide pusher track/divider to match width of product. Load first row of product. Repeat this step until you reach right edge of Power Zone®.
- 6** **OPTIONAL:** Use paddle extender for tall product. Slide paddle extender onto pusher paddle.
- 7** Place next Power Zone® System on top of store shelf. **NOTE:** The left end divider is not needed when connecting two units together. Line up Power Zone® front and rear rails with previously installed Power Zone® System. Align holes in front rail with shelf holes. Secure with fasteners.
- 8** The last pusher track/divider will be used as the right end divider.

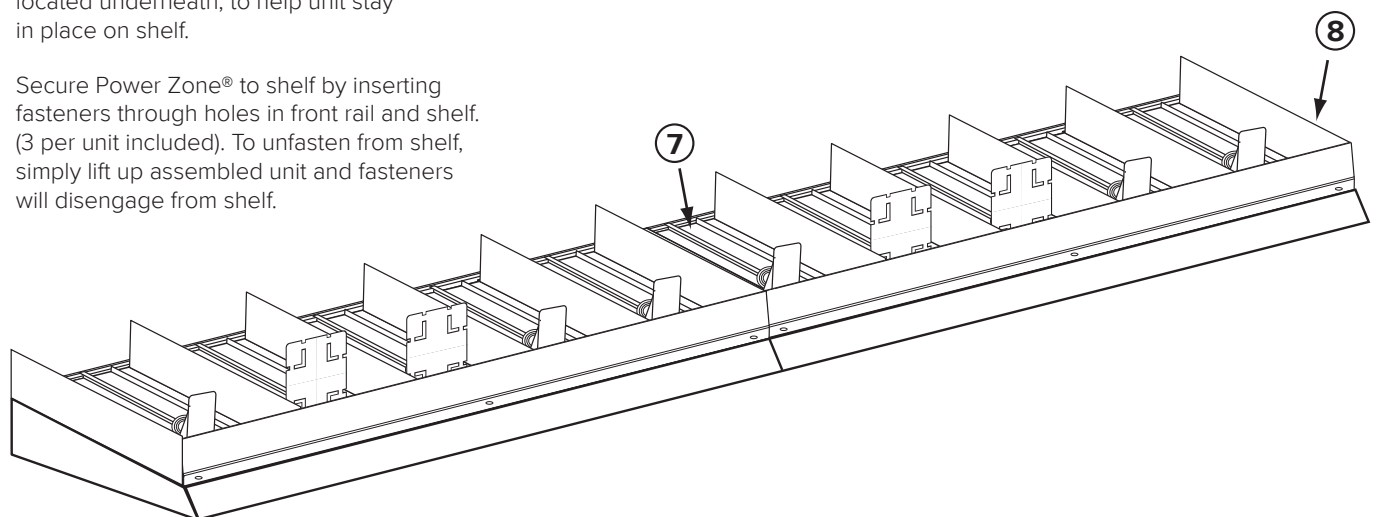

20190516