
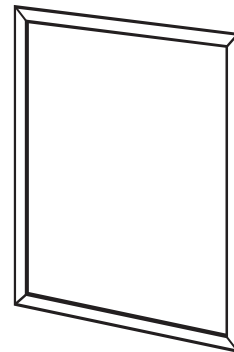
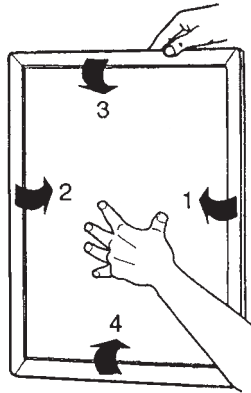
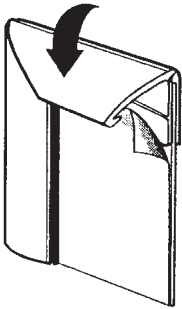
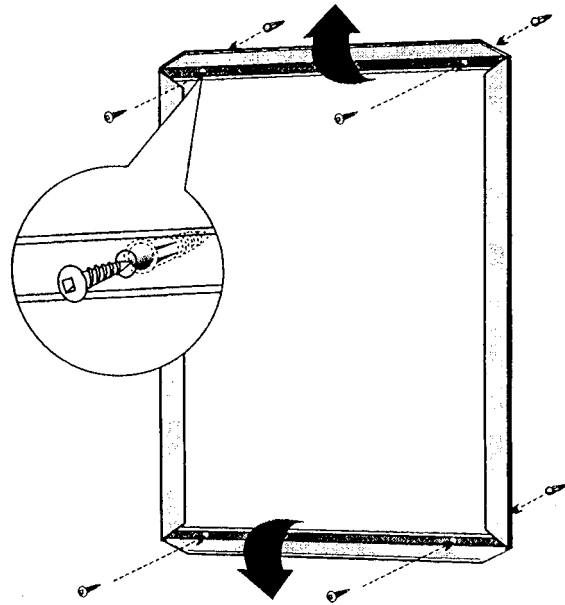


①

Position and align frame on wall. Open frame molding, as indicated, to reveal mounting holes.

Mark position of holes with pencil. Use the plastic wall anchors and screws that are provided to mount frame to wall.

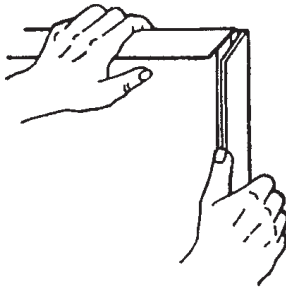

②

Hold sign in position and close frame, in sequence shown.

③

Assembly is complete.

20190410