

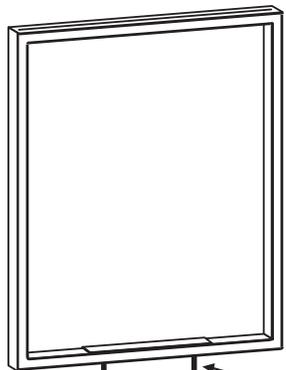
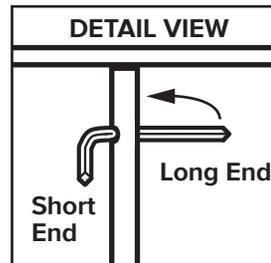



- ① Insert screw bar down into frame holes.

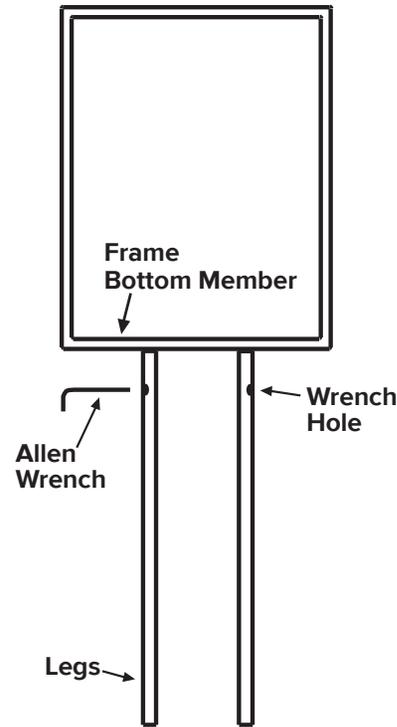


- ② Thread leg with the wrench hole end onto screws of the bar stud. Repeat for the other leg.

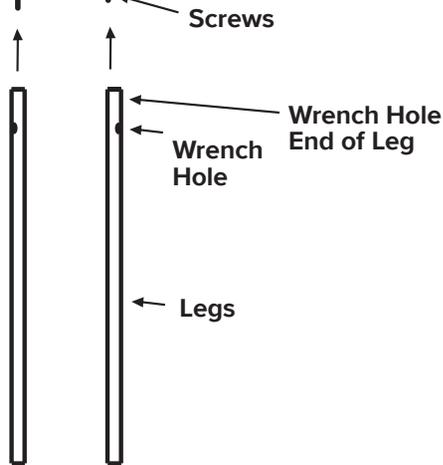

- ③ Insert long end of Allen wrench into wrench hole until seated. Use long end of Allen wrench as a lever and tighten leg (very tight). TIP: Hold the bottom member of frame with one hand and tighten leg with the other hand. Repeat for other leg.

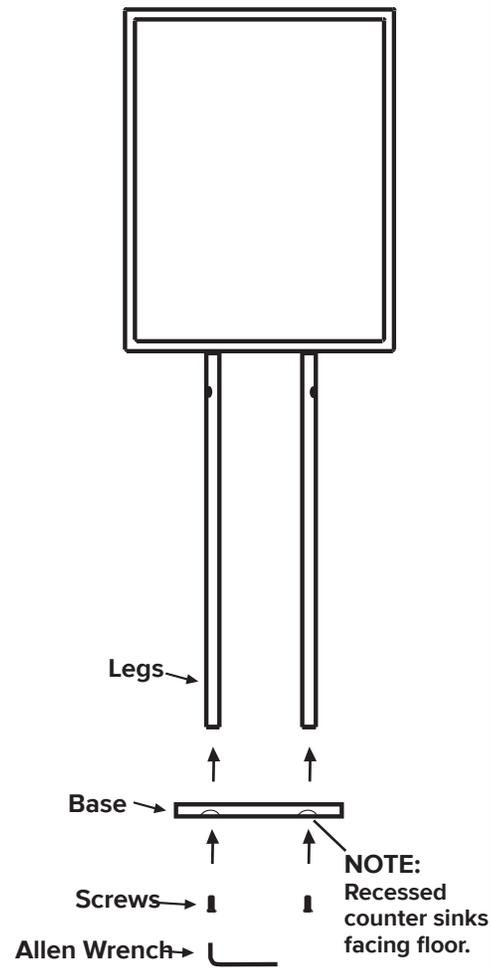

- ④ Insert screws into base and up into legs. NOTE: The side of the base with the recessed counter sink holes should be facing the floor. Use Allen wrench to fasten base to legs.

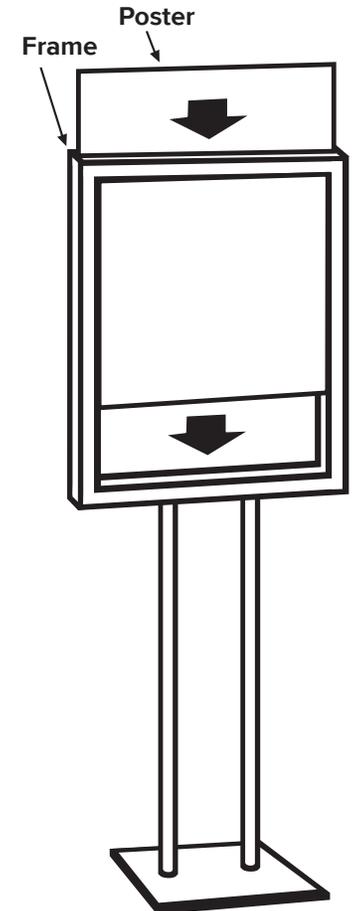

- ⑤ Insert poster into top of frame. Installation is complete.