


FRESHRACK FLIP LENS

Installation Instructions


COMPONENTS:

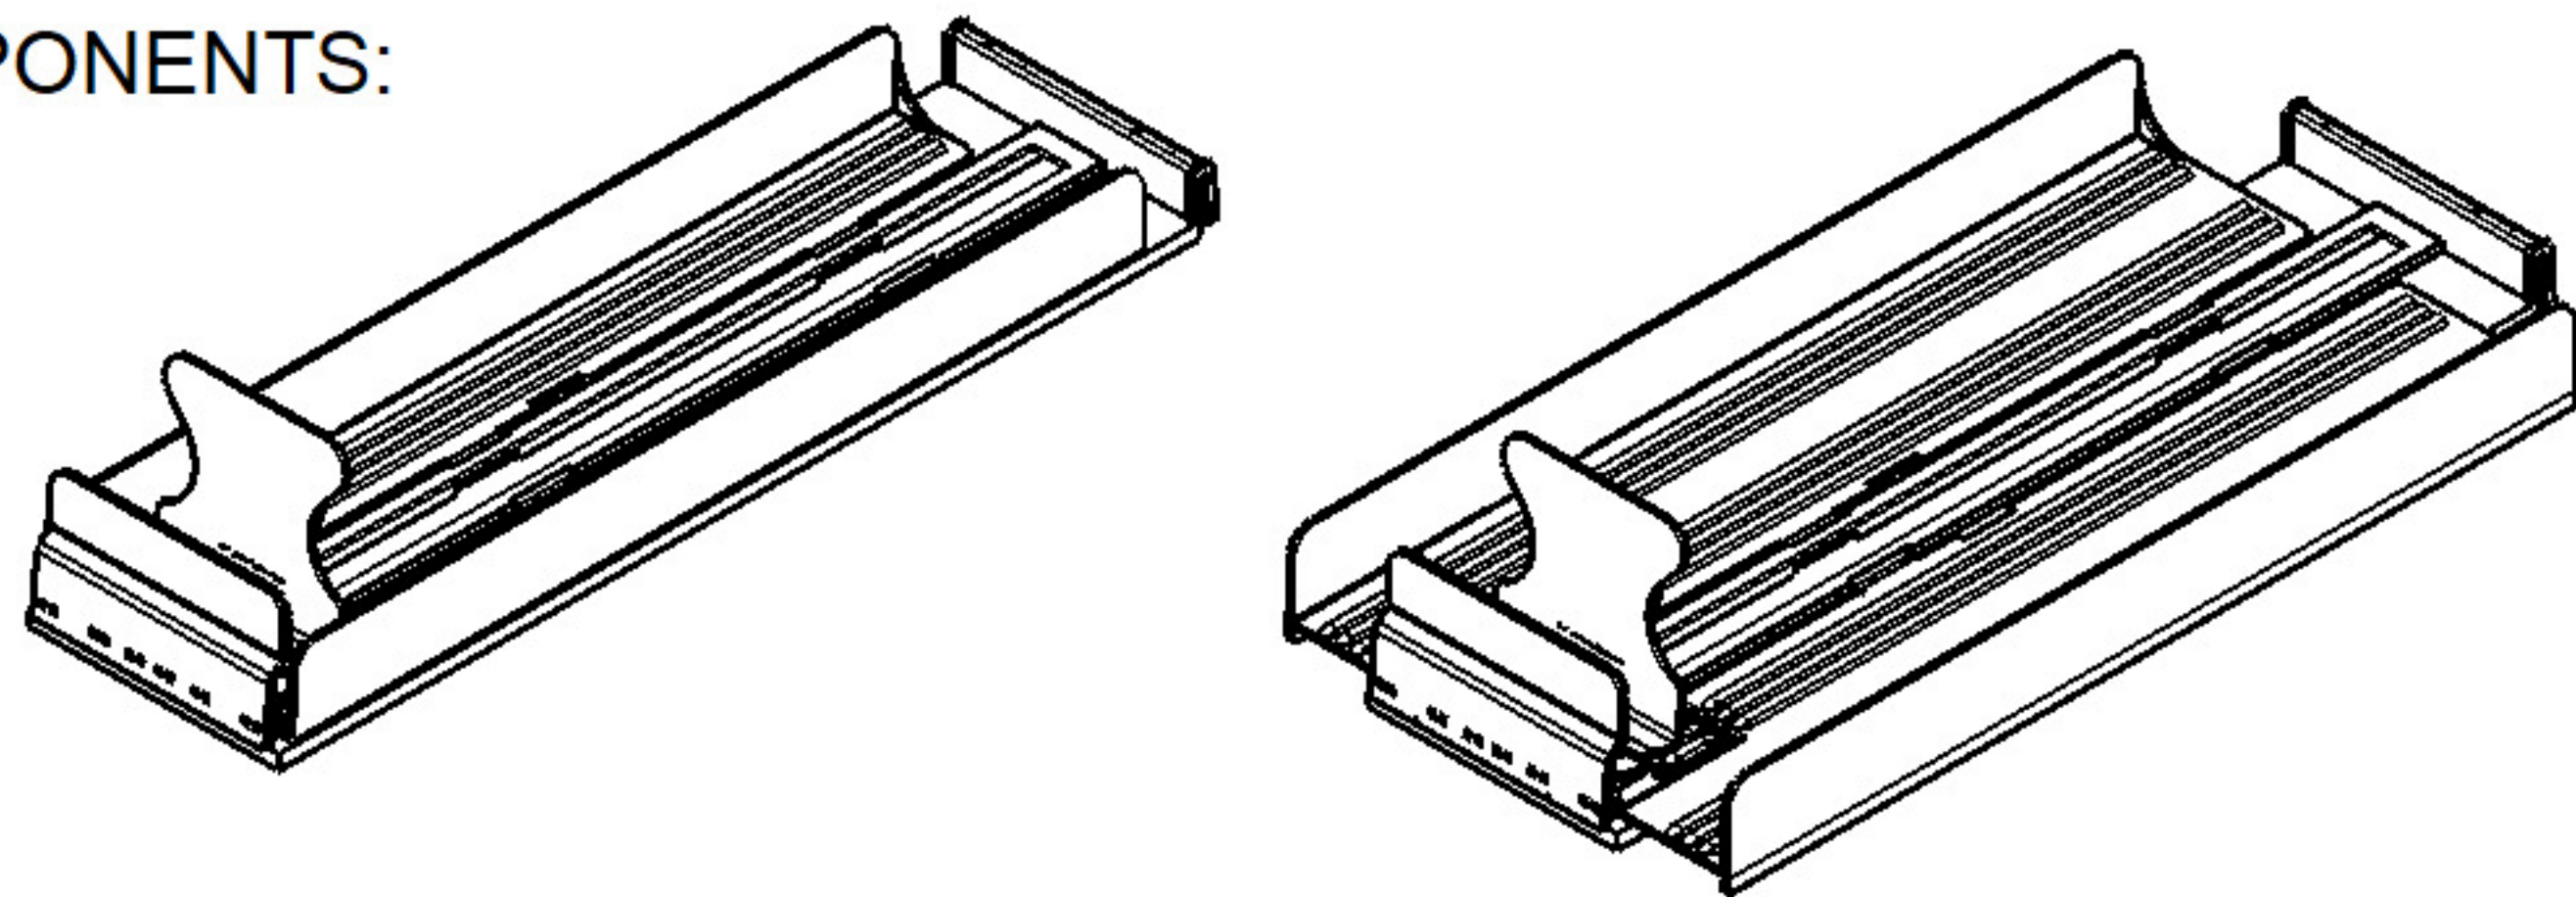

(12) STANDARD TRAYS OR (8) WIDE WALL TRAYS



SCAN FOR AN
INSTRUCTIONAL VIDEO

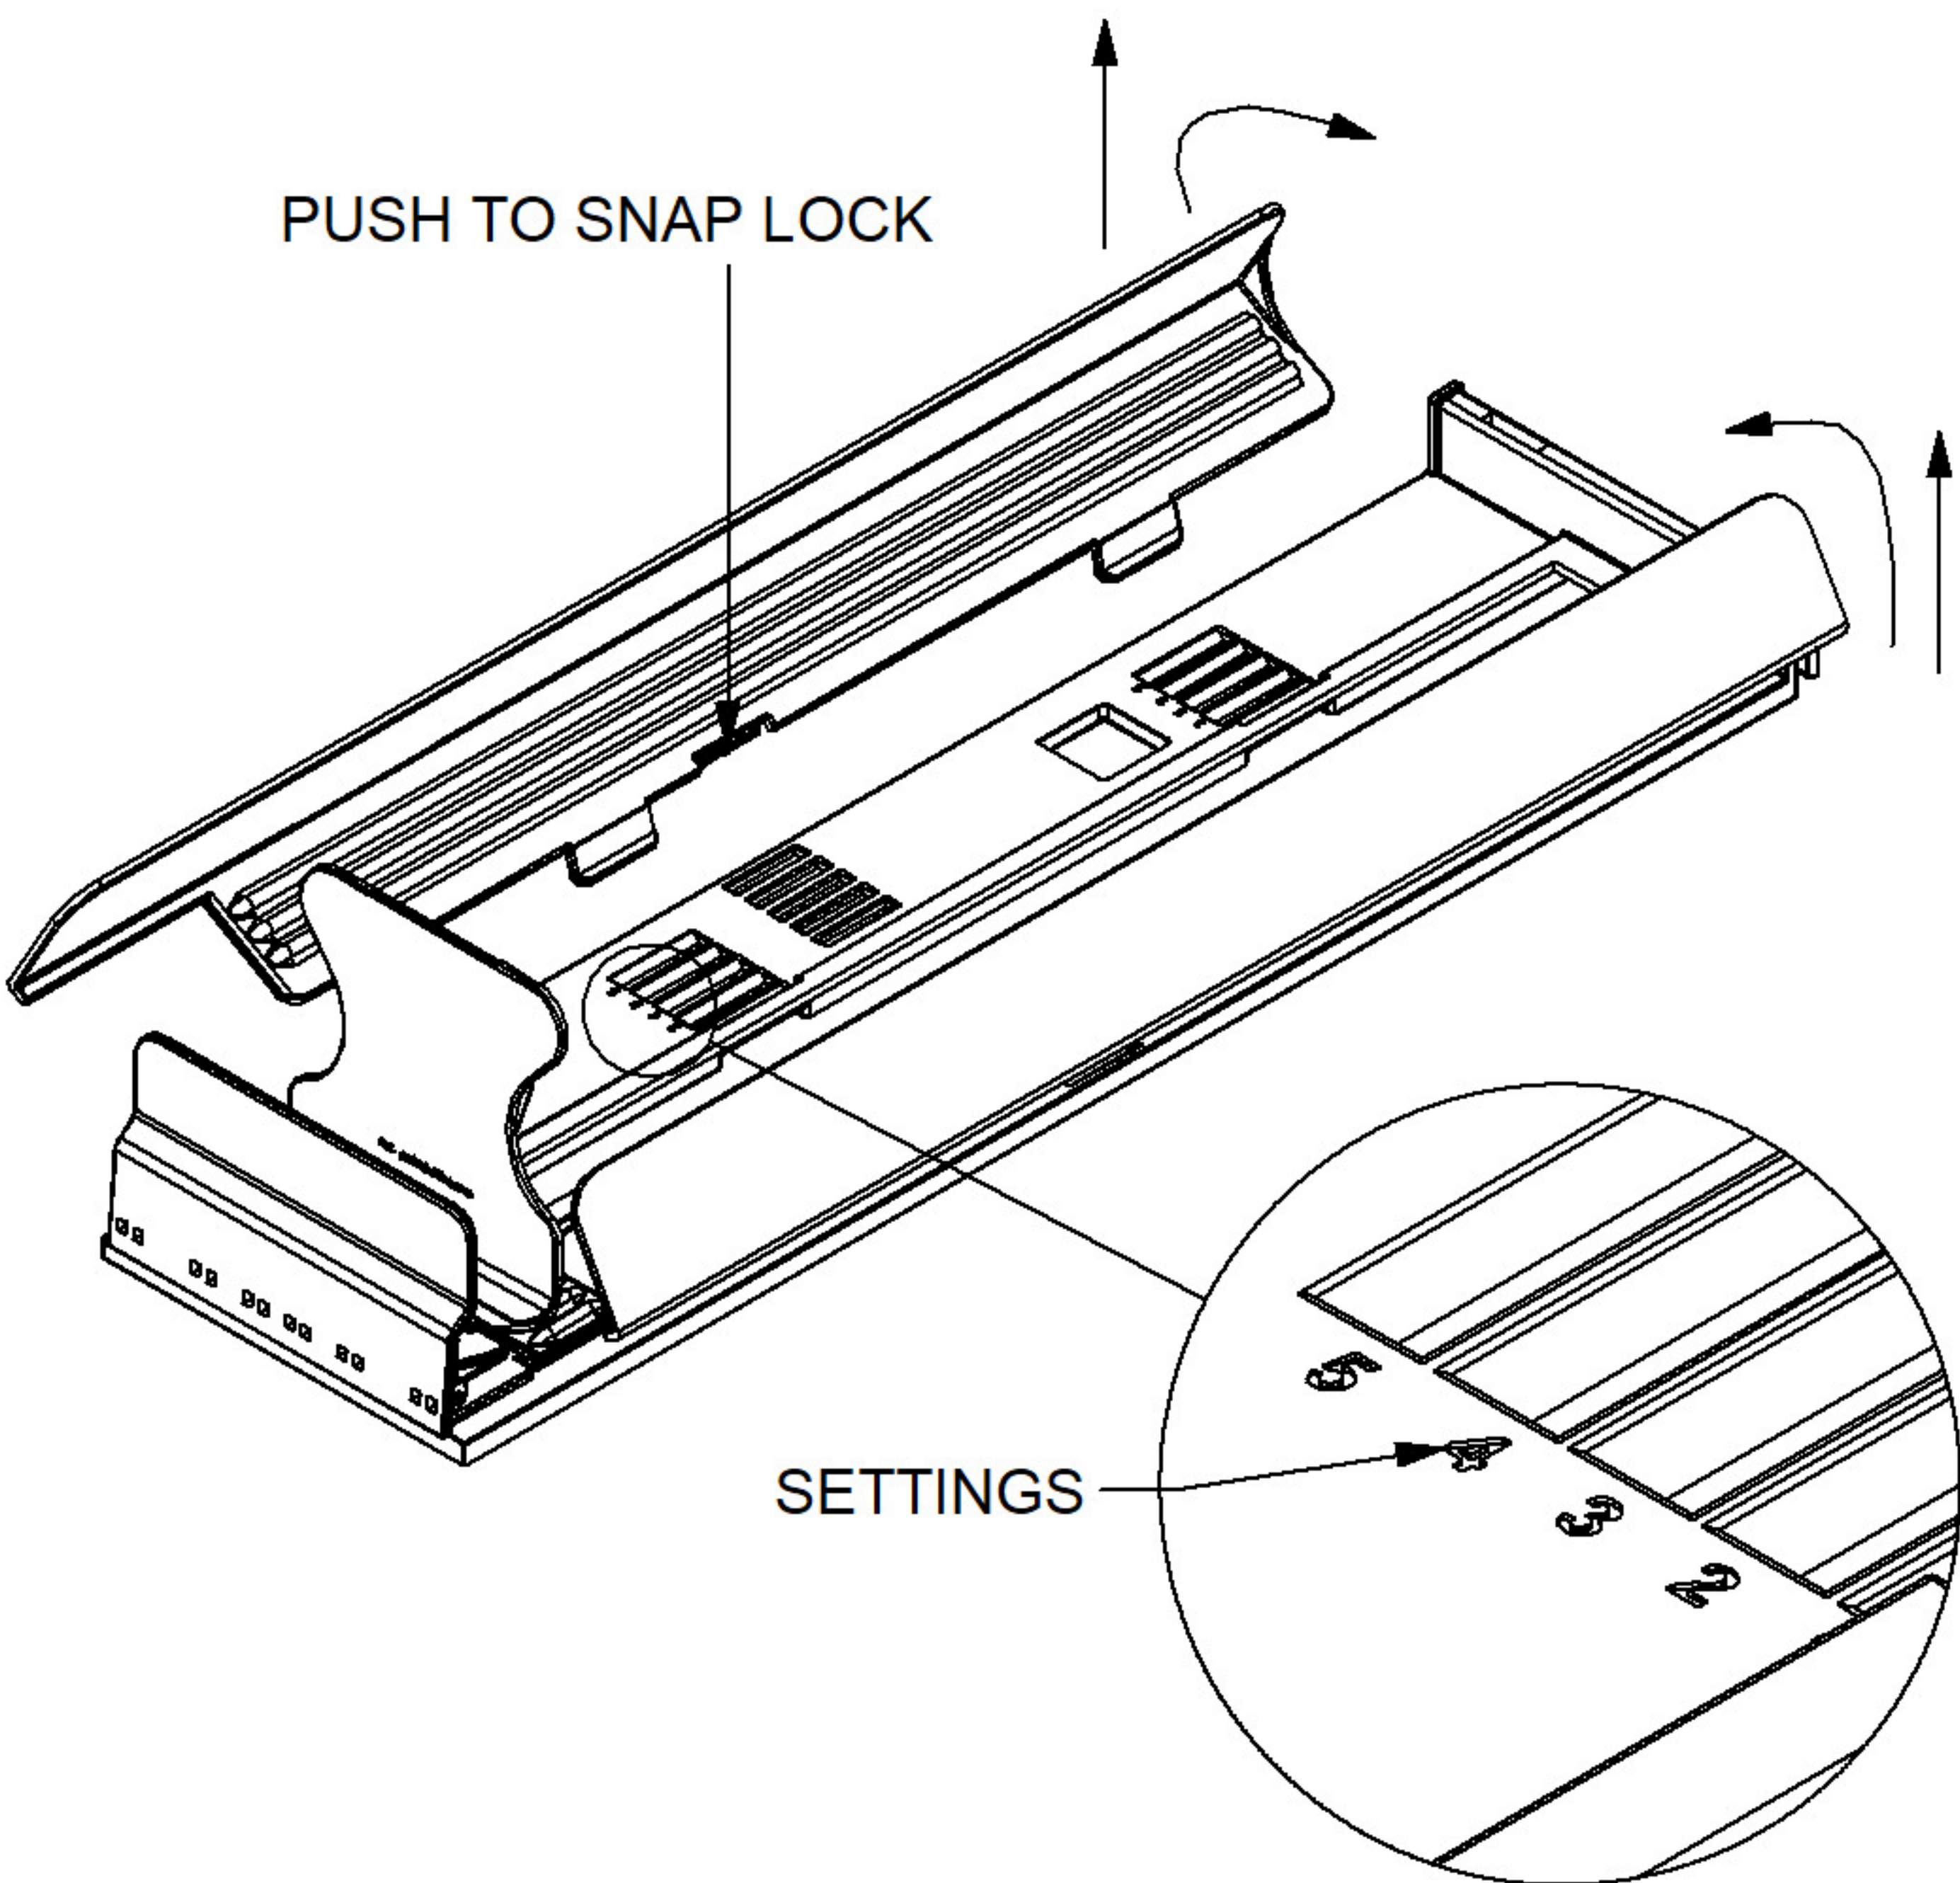

STEP 1: SIDEWALL ADJUSTMENT
ROTATE EACH SIDEWALL WHILE PULLING UPWARDS TO
DISENGAGE. SELECT SETTING BASED ON PACKAGING SIZE.
INSTALL: ROTATE EACH SIDEWALL INTO SELECTED
SETTINGS SLOT. PUSH DOWN TO SNAP LOCK, SHOWN WITH
ARROW. SEE SETTING OPTIONS BELOW AND ON PAGE 2.


NOTE: TYPICAL SIDEWALL SETTINGS ARE SHOWN BELOW:

ITEM TYPE	TRAY TYPE	TRAY ITEM #	SIDEWALL SETTINGS (L,R)
SMOKED SAUSAGE & HOT DOG COMMODITY			
ROPE SAUSAGE	WIDE WALL TRAY	4855410004	1,1
HOT DOGS	STANDARD TRAY	4855410001	1,2
HOT DOGS, BUN LENGTH	STANDARD TRAY	4855410001	2,2
METT,BRAT,SMKD SSGE LINKS	STANDARD TRAY	4855410001	2,2
BREAKFAST MEATS COMMODITY			
BACON	WIDE WALL TRAY	4855410004	3,3
BACON CENTER CUT	WIDE WALL TRAY	4855410004	1,1
BACON PRE-COOKED	WIDE WALL TRAY	4855410004	5,5
SAUSAGE PATTY TRAY	WIDE WALL TRAY	4855410004	3,4
SAUSAGE LINK TRAY	WIDE WALL TRAY	4855410004	1,1
SAUSAGE - ROLL PACKAGE	STANDARD TRAY	4855410001	3,4
HMR COMMODITY			
SIDES	STANDARD TRAY	4855410001	4,4
MEALS - VERTICAL MERCHANDISING	STANDARD TRAY	4855410001	3,3
MEALS - PRIVATE LABEL	STANDARD TRAY	4855410001	3,4


For more information,
call **800.422.2547**
visit **www.siffron.com**

DRAWING NUMBER: 20059414INS
REV: C

siffron
www.siffron.com

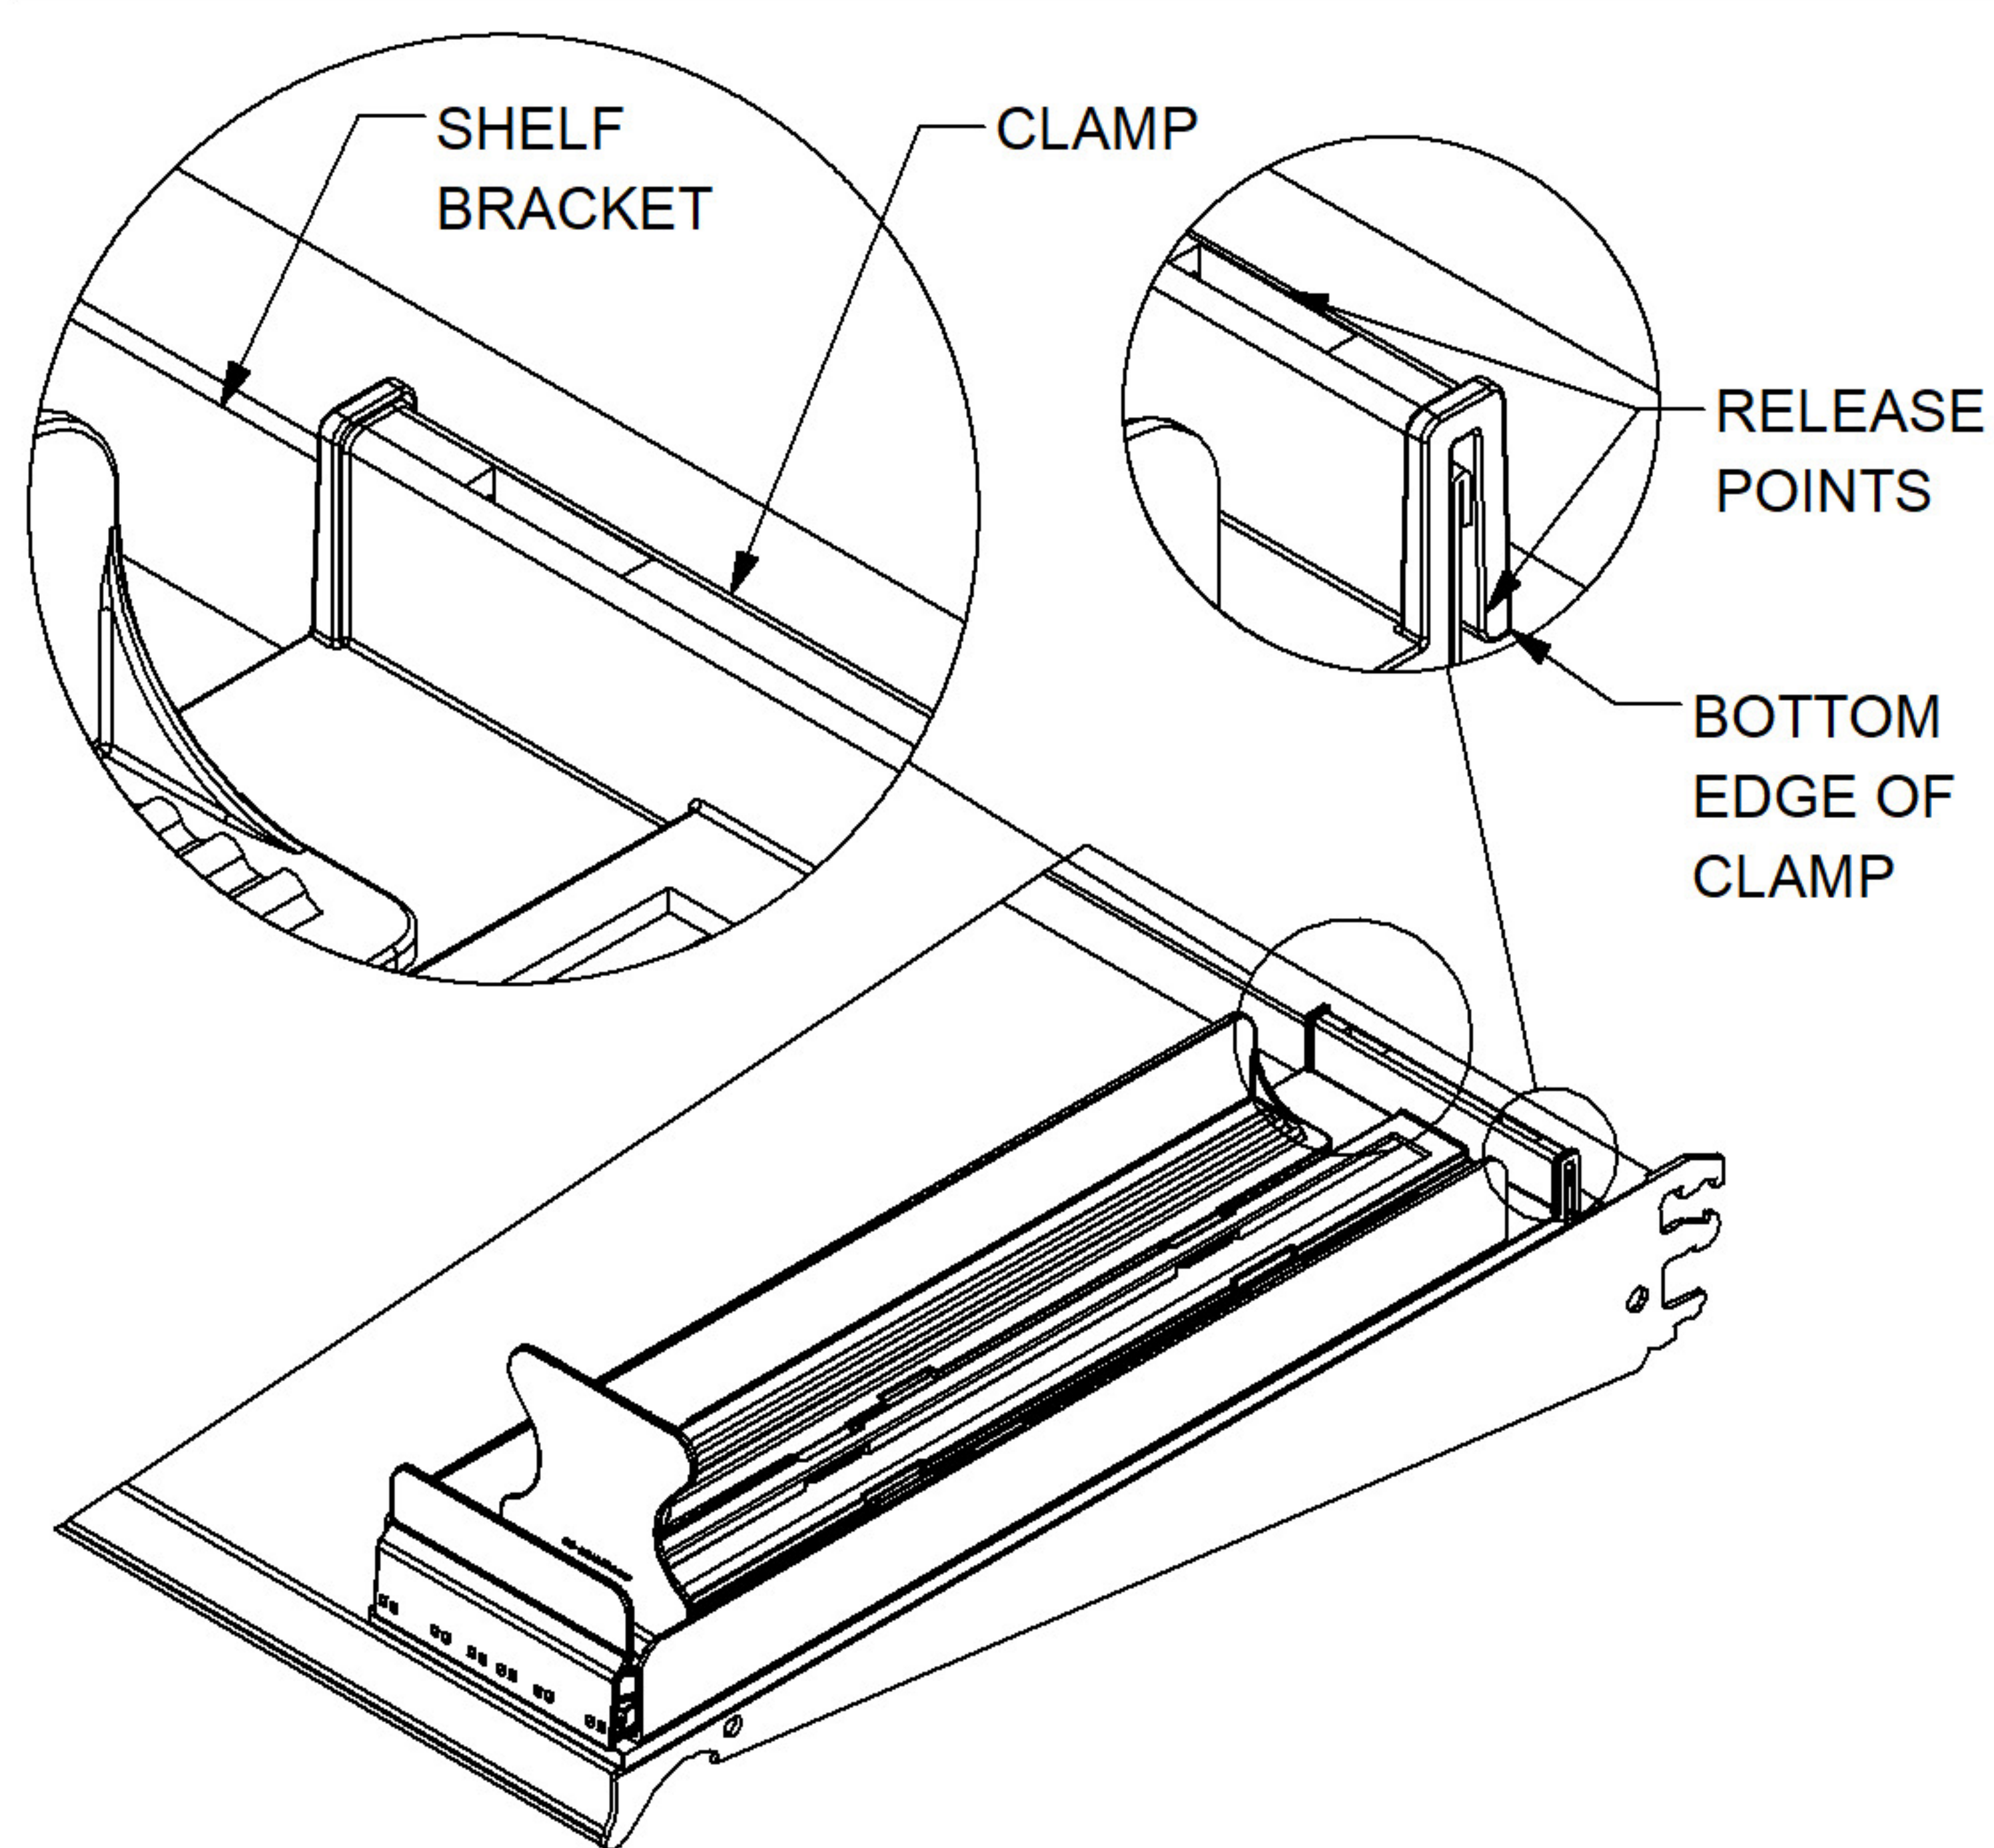

STEP 2: TRAY PLACMENT ONTO SHELF. SEE PAGE 3 IF NO SHELF BRACKET ON BACK OF SHELF. PLACE TRAY ONTO SHELF BY LIFTING REAR OF TRAY AND CLIPPING OVER BACK SHELF BRACKET (TO REMOVE PULL UP FROM BOTTOM EDGE OF CLAMP, OR USE FLATHEAD SCREWDRIVER ON A RELEASE POINT WHILE LIFTING UP ON BACK OF TRAY)

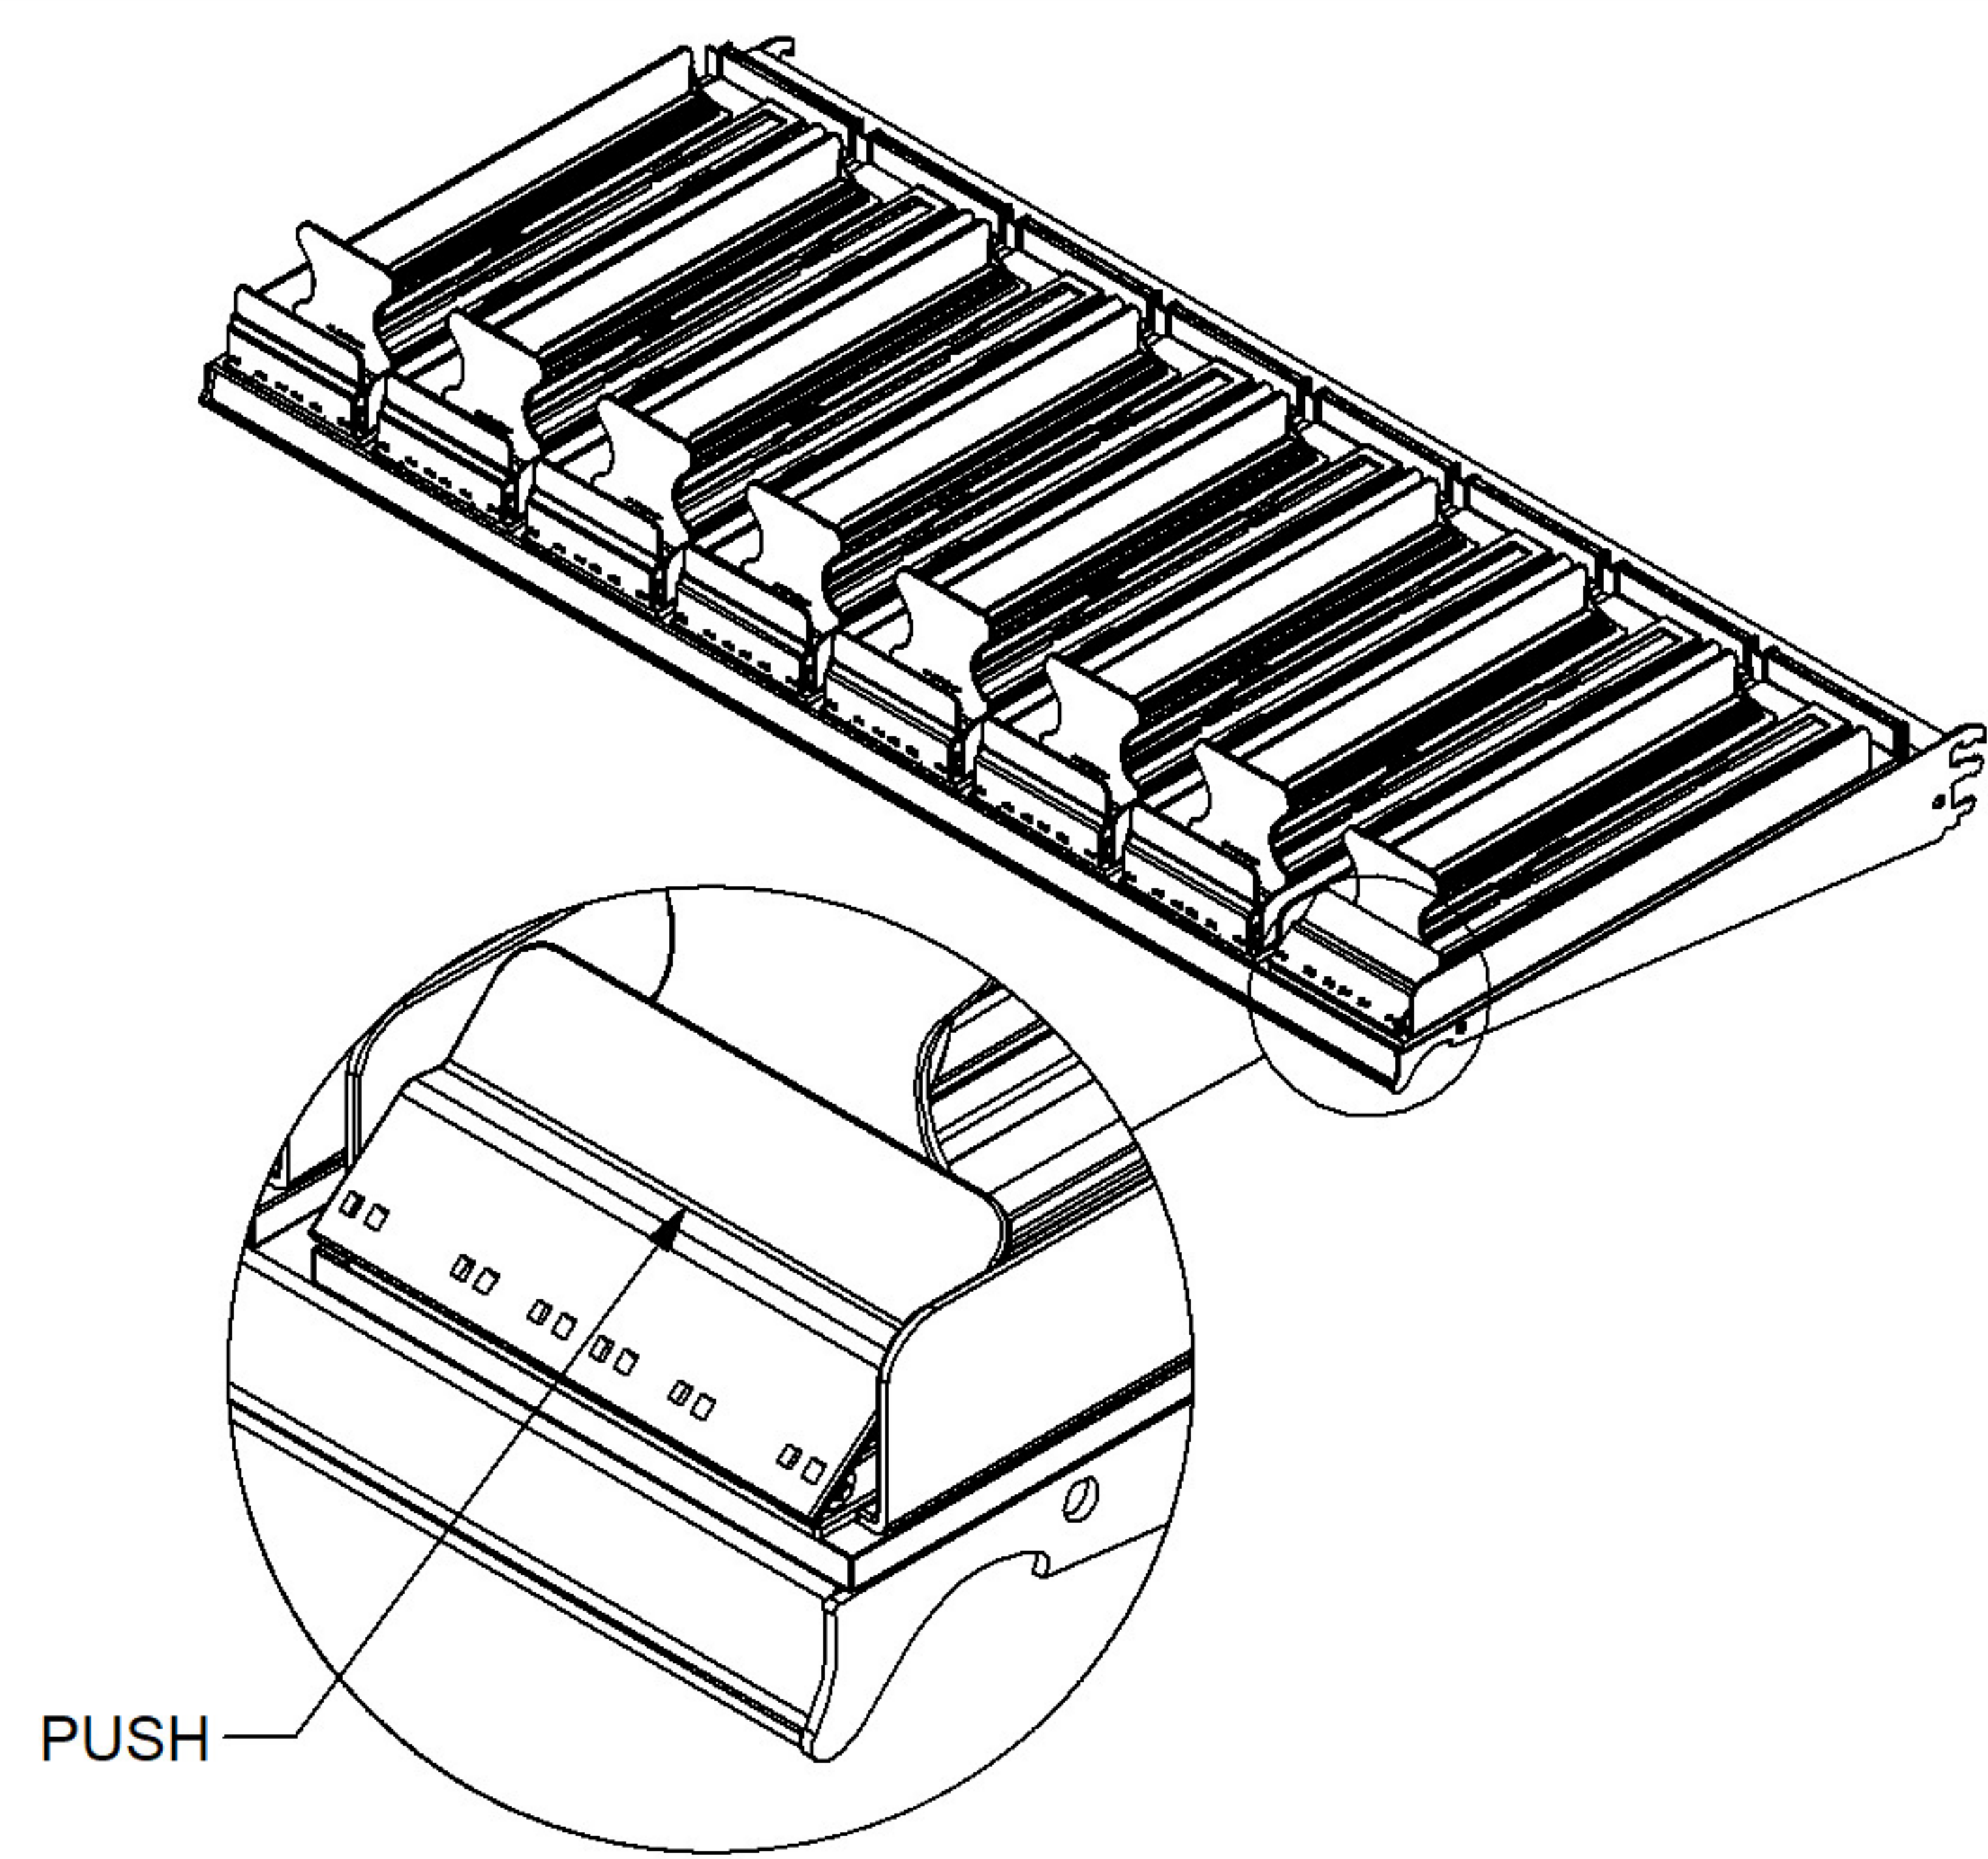

STEP 3: REPEAT FOR PLANOGRAM AND STOCKING
REPEAT STEPS 1 AND 2 FOR THE REST OF THE STORE PLANOGRAM. STOCK PRODUCT PER STORE PLANOGRAM BY PUSHING INTO THE FLIP LENS WHICH WILL CAUSE IT TO FLIP DOWNWARDS AND OUT OF THE PATH OF LOADING.

NOTE: TRAY SIZES AT THE DIFFERENT SETTINGS ARE SHOWN BELOW:



STANDARD TRAY SIDE WALLS SETTING			
LEFT SIDEWALL	RIGHT SIDEWALL	INSIDE DIMENSION (INCHES)	OUTSIDE DIMENSION (INCHES)
1	1	5.19	5.41
1	2	5.53	5.75
2	2	5.86	6.08
2	3	6.2	6.42
3	3	6.53	6.75
3	4	6.87	7.09
4	4	7.2	7.42
4	5	7.54	7.76
5	5	7.87	8.09

WIDE WALLS SETTING			
LEFT SIDEWALL	RIGHT SIDEWALL	INSIDE DIMENSION (INCHES)	OUTSIDE DIMENSION (INCHES)
1	1	9.19	9.41
1	2	9.53	9.75
2	2	9.86	10.08
2	3	10.2	10.42
3	3	10.53	10.75
3	4	10.87	11.09
4	4	11.2	11.42
4	5	11.54	11.76
5	5	11.87	12.09


FRESHRACK FLIP LENS

Installation Instructions


COMPONENTS FOR SHELF CLAMP AND J-CHANNEL EXTRUSION KIT:

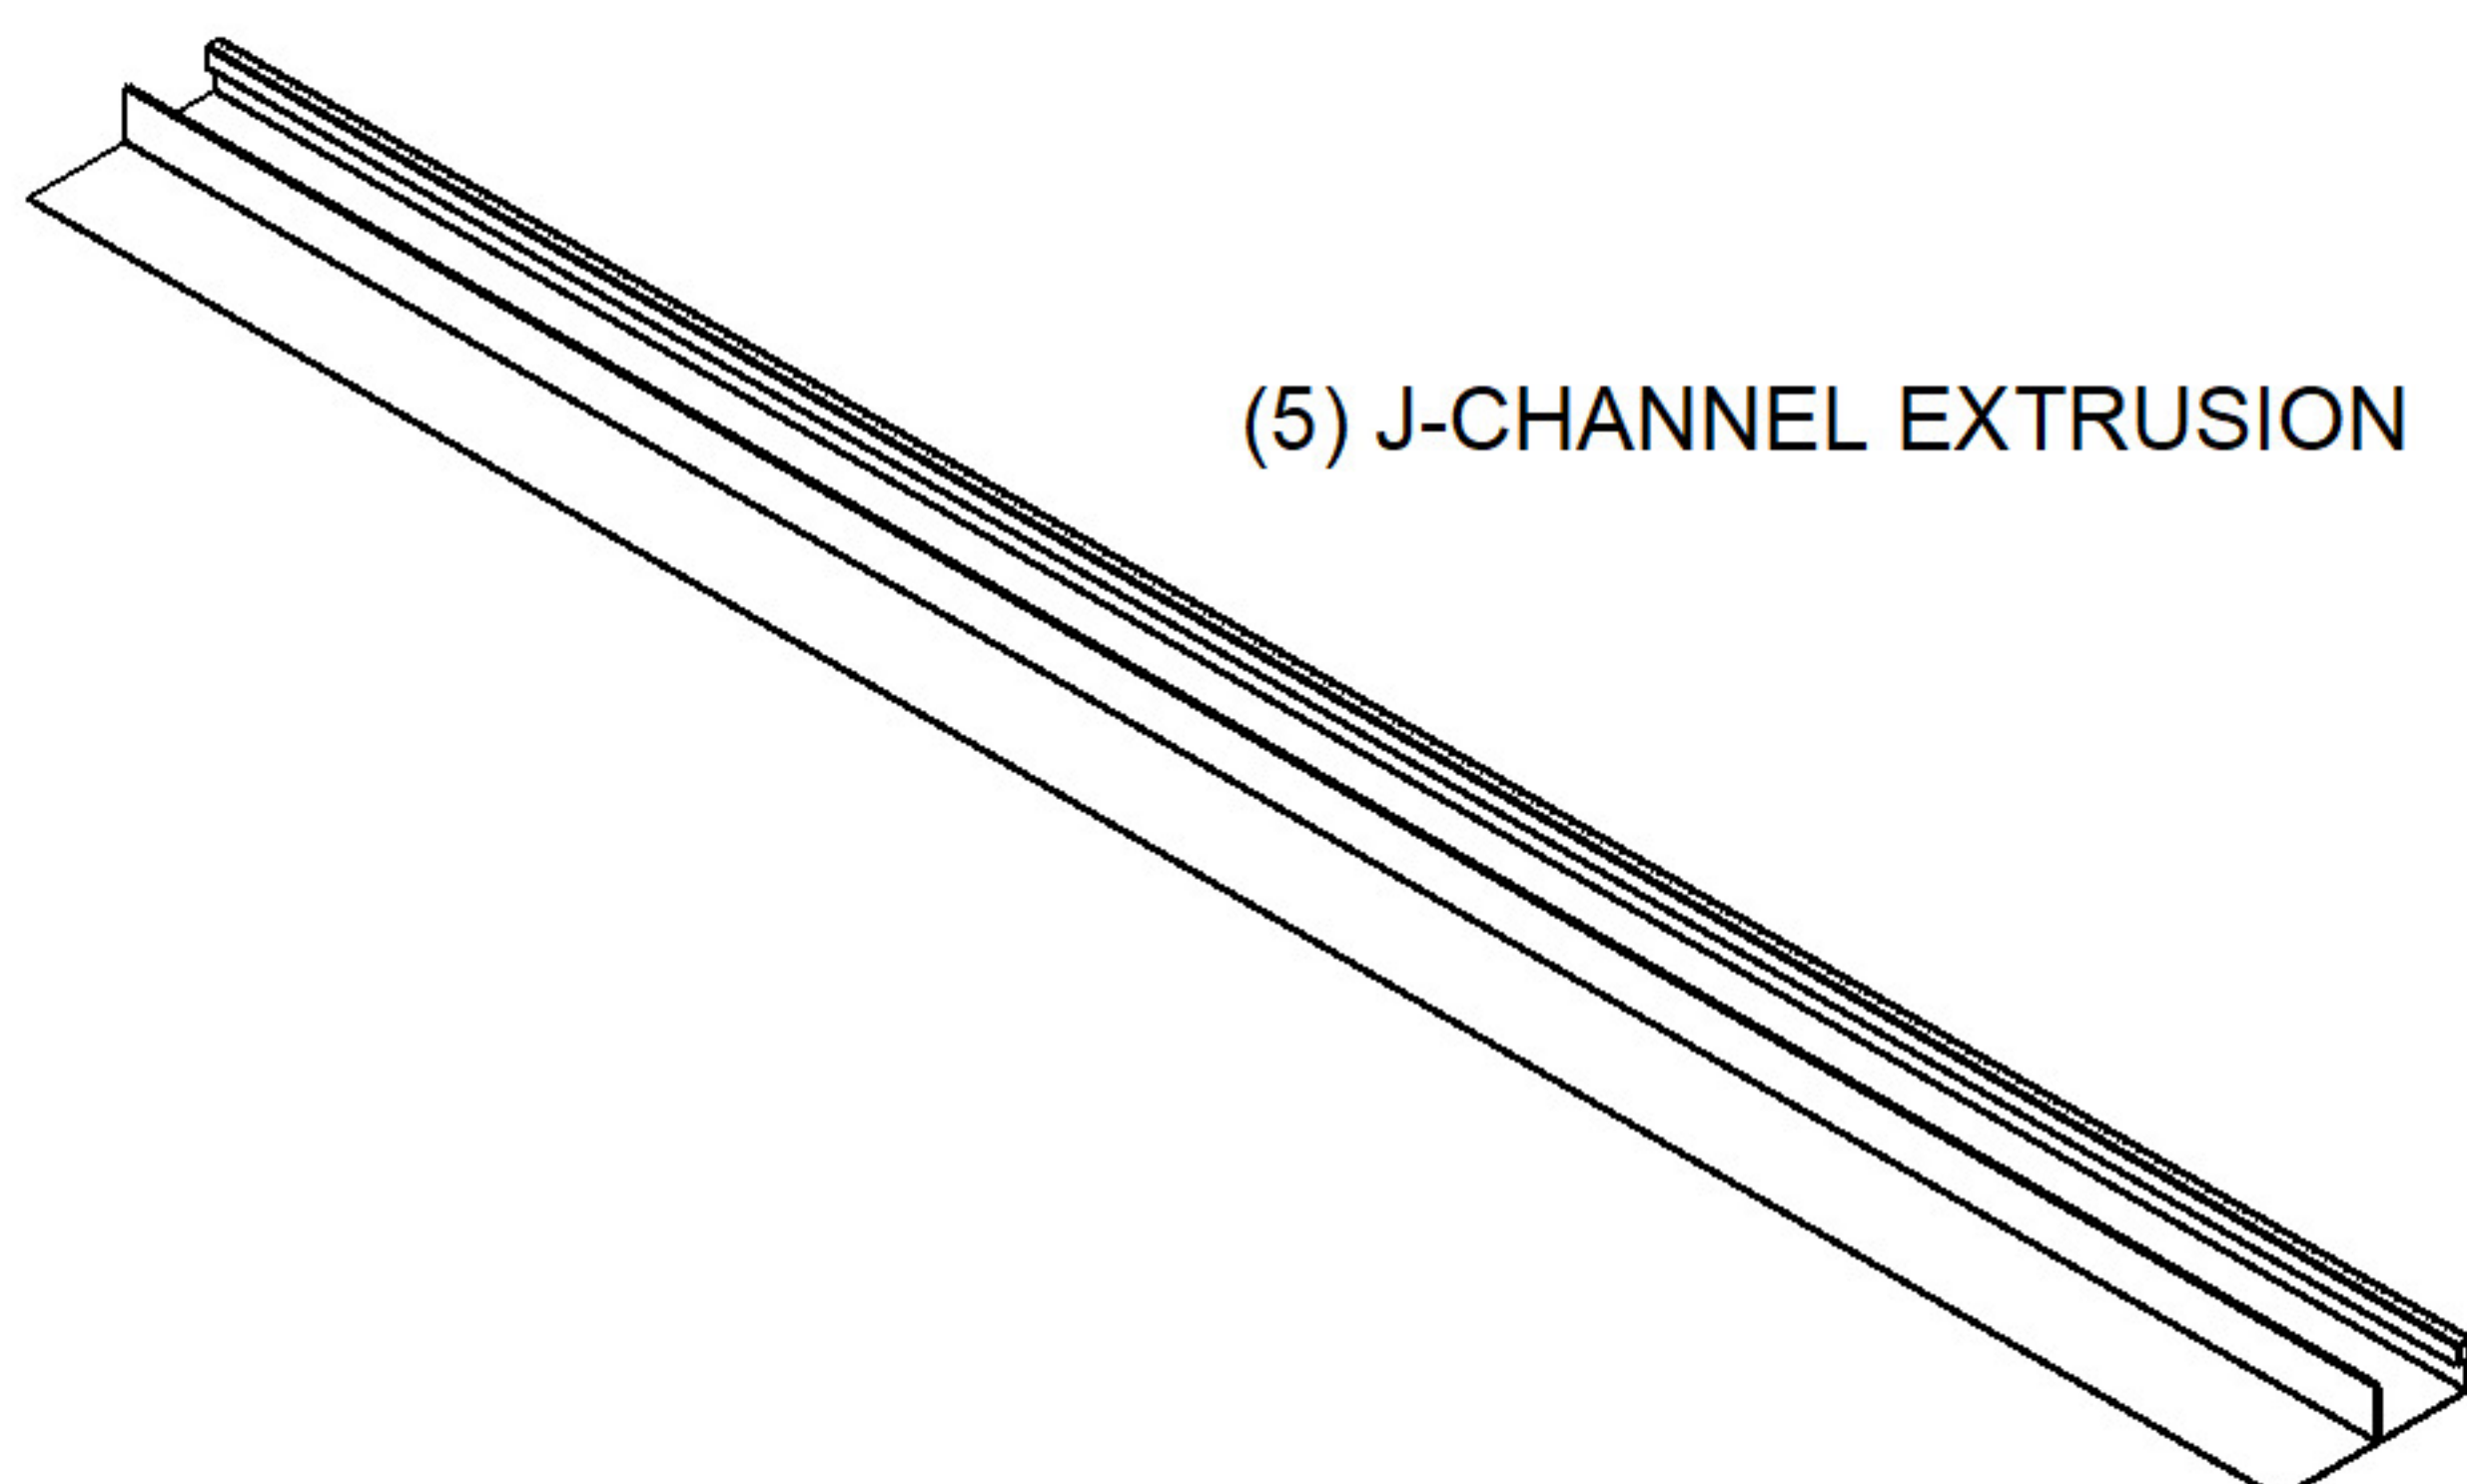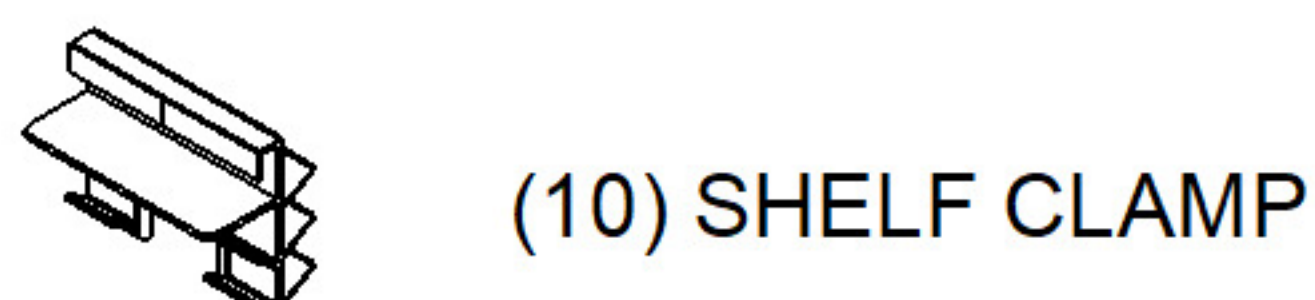


STEP C1: IF SHELF DOES NOT HAVE REAR BRACKET:
USE SHELF CLAMP AND J-CHANNEL EXTRUSION KIT SHOWN
ABOVE.

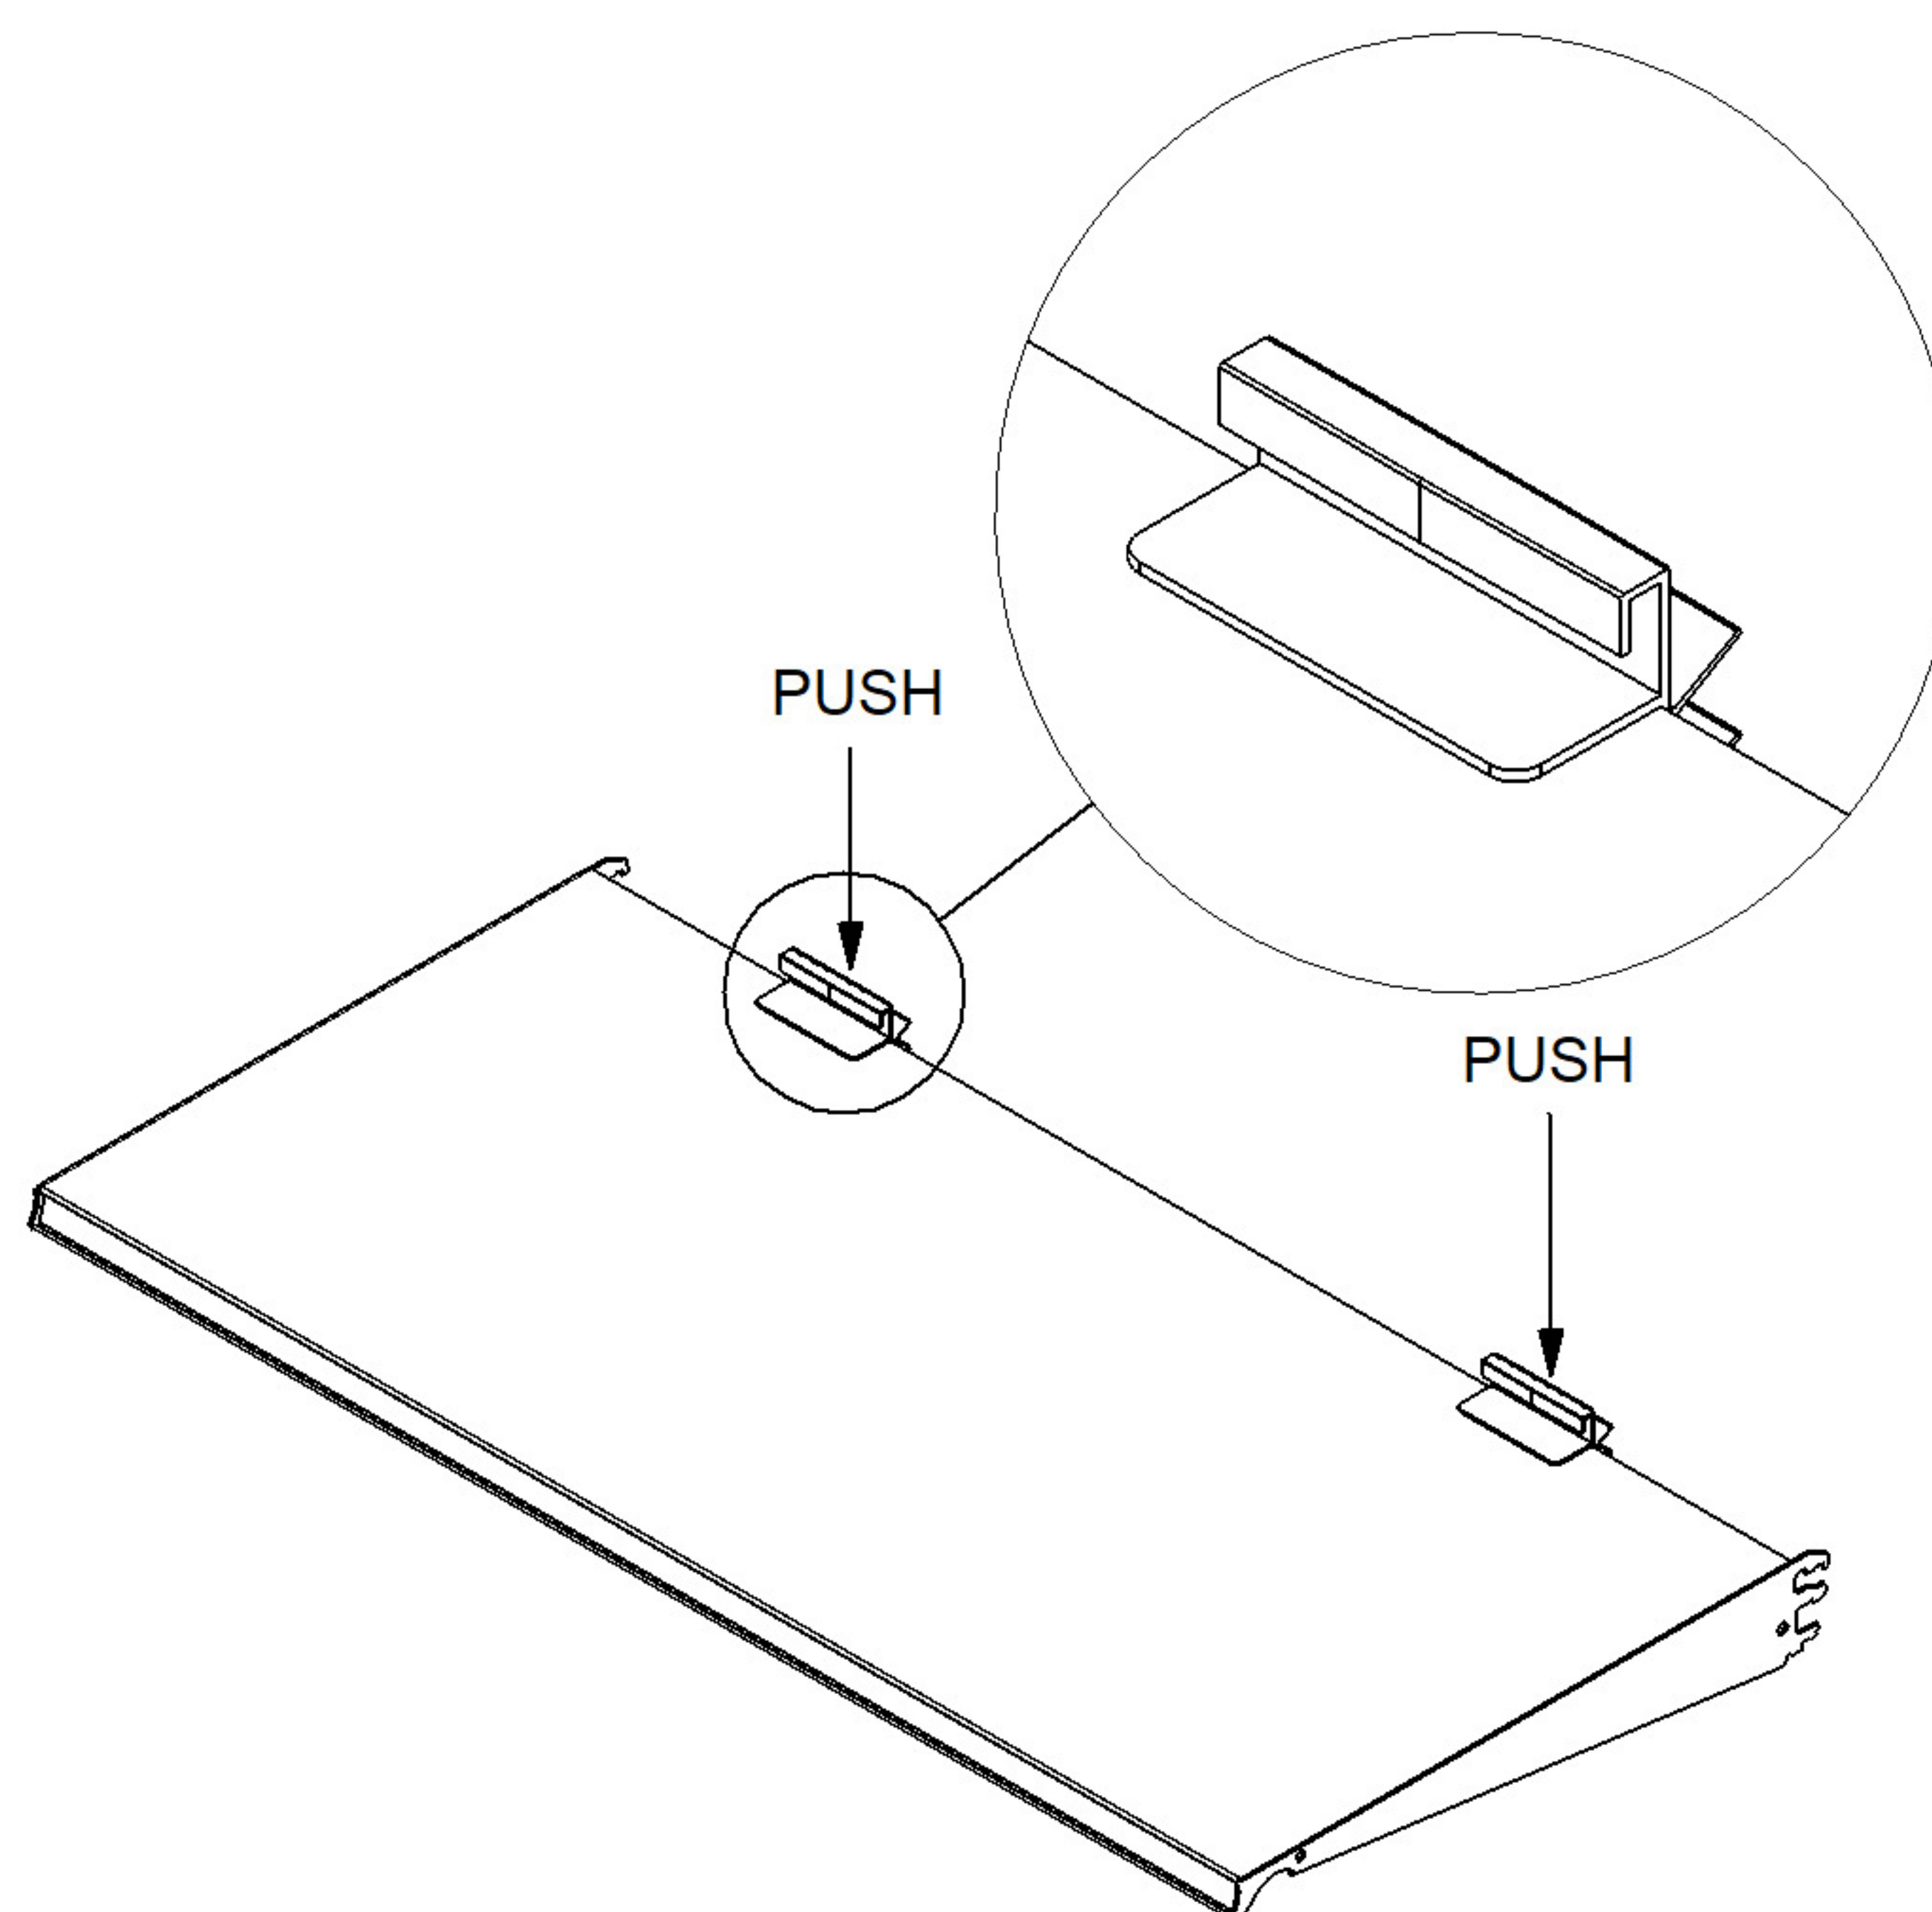

STEP C2: SHELF CLAMP INSTALLATION
INSTALL SHELF CLAMP BY PUSHING INTO THE SPACE
BETWEEN THE SHELF AND THE BACK WALL. IT IS EASIEST
TO INSTALL AT THE CENTER WIDTH OF THE SHELF, THEN
PUSH THE CLAMPS SPACED APPROX. AS SHOWN.

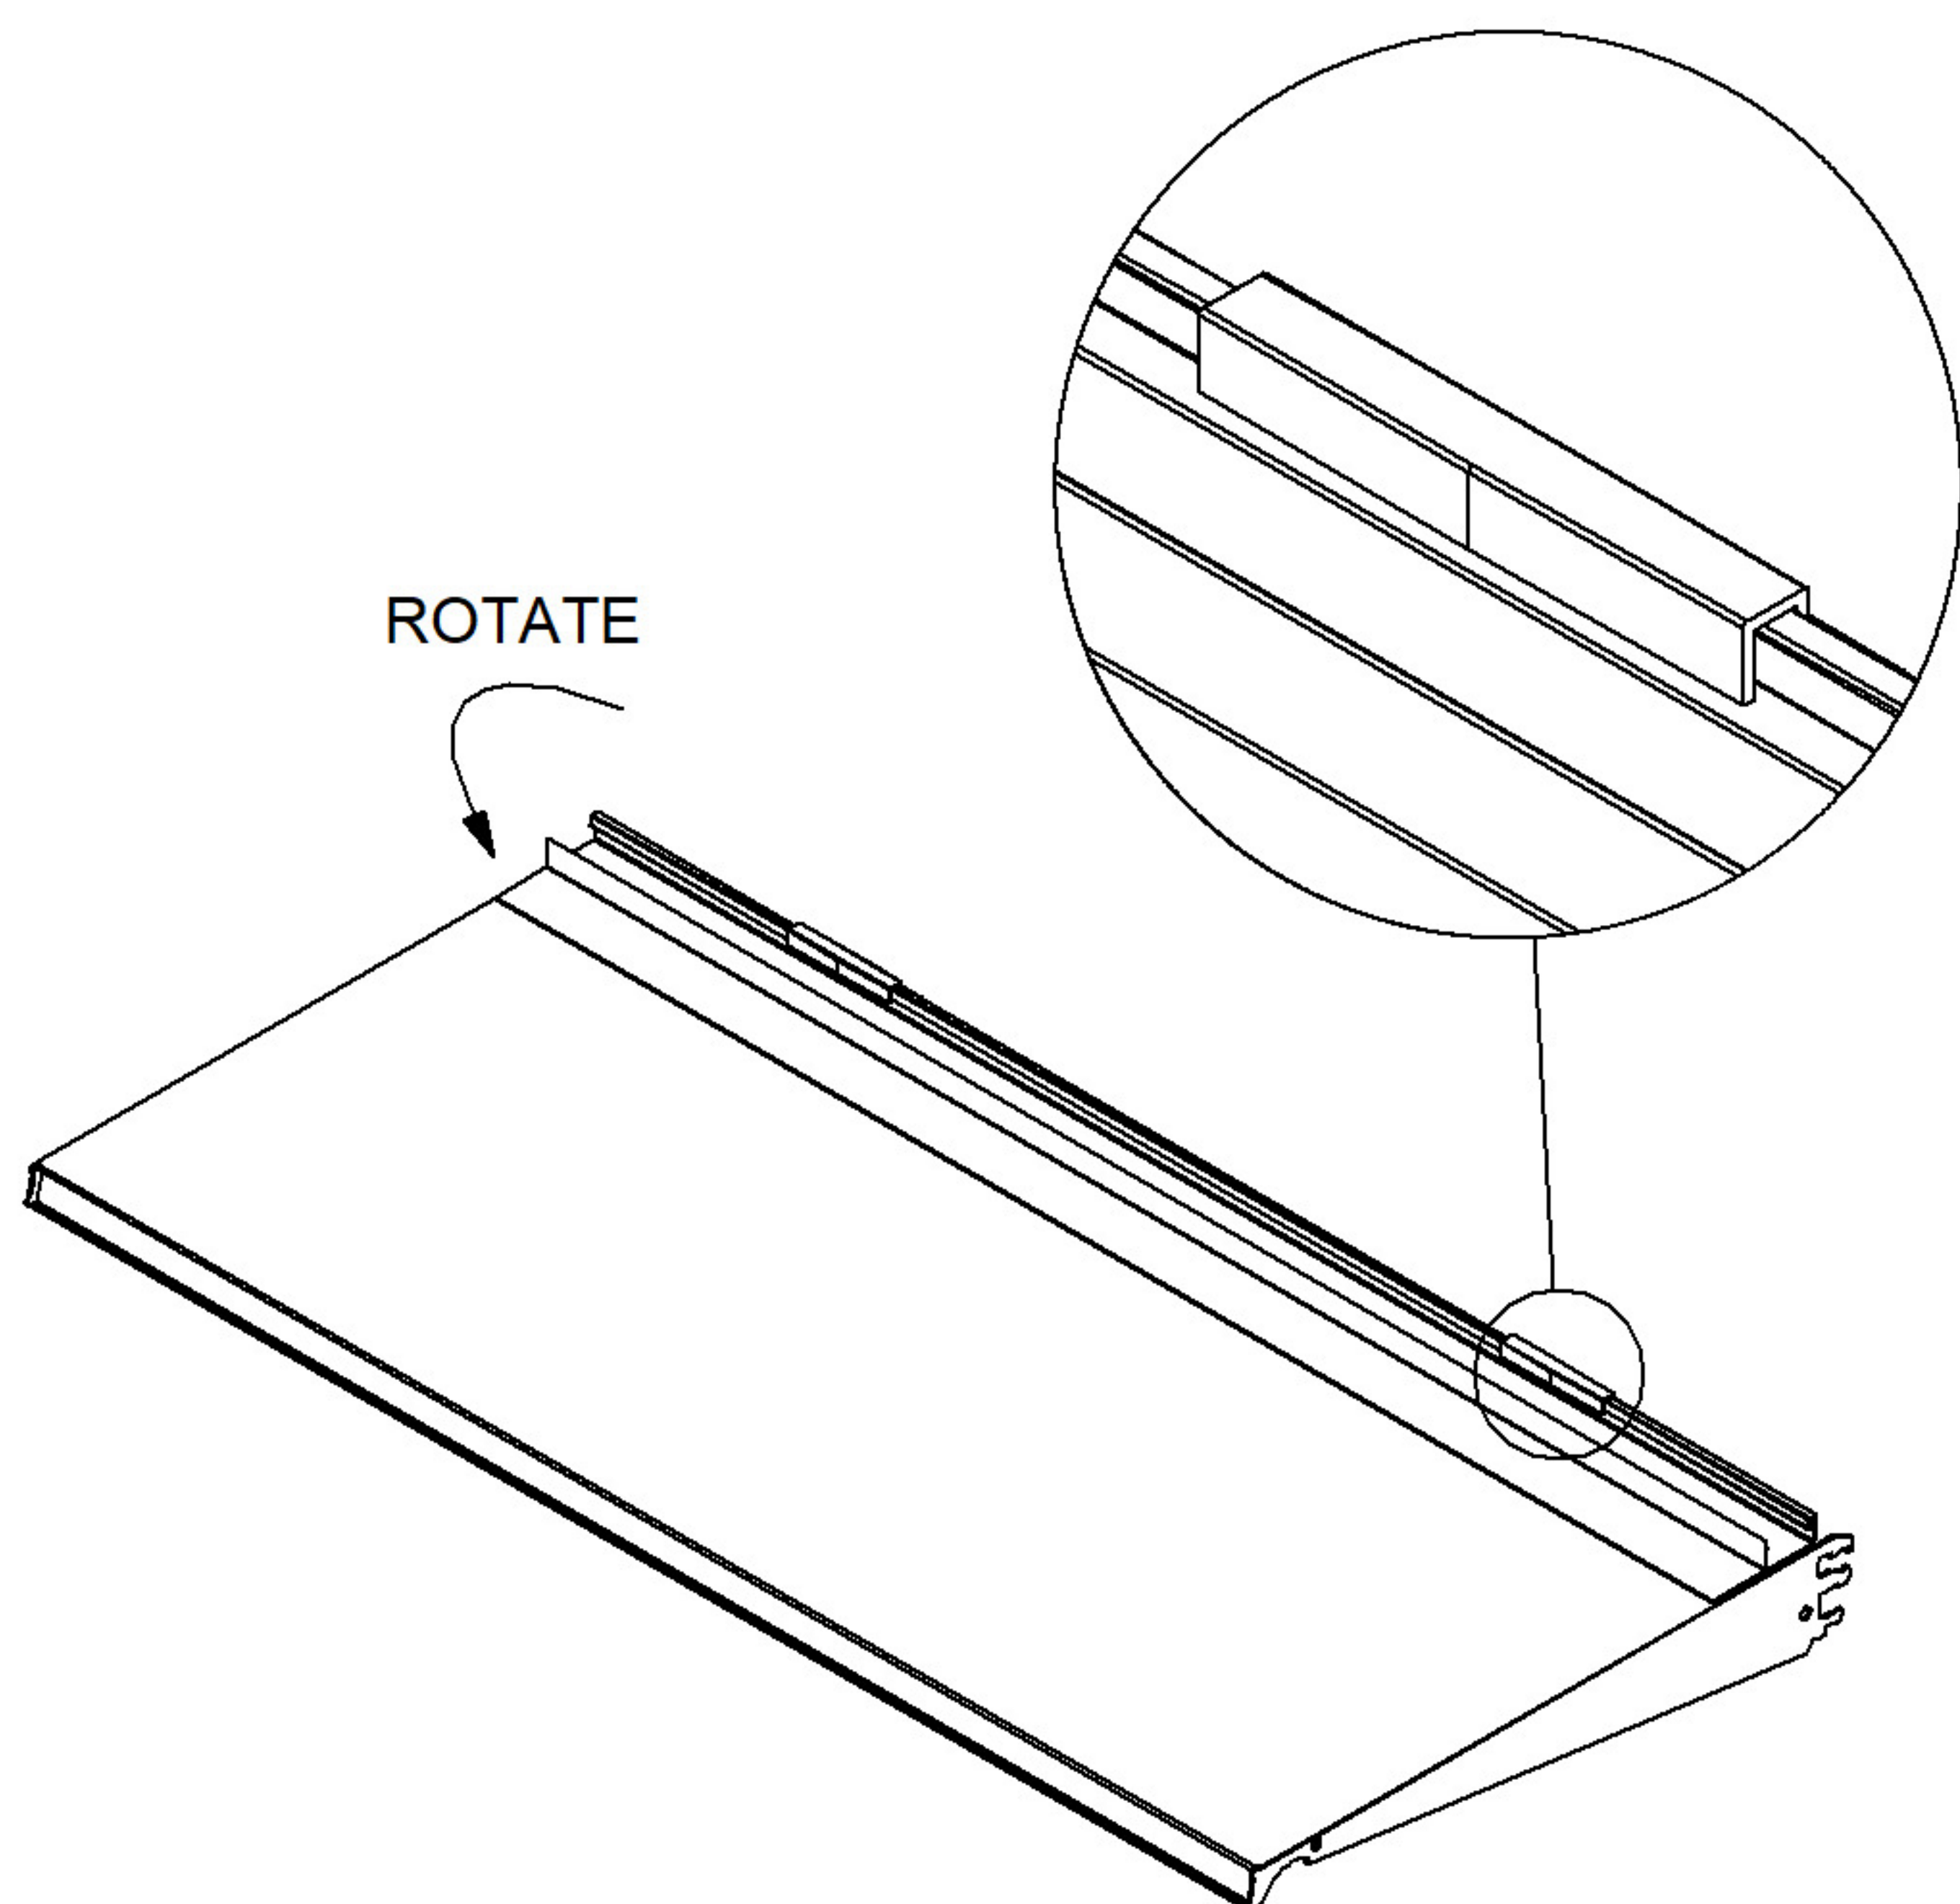

STEP C3: J-CHANNEL EXTRUSION INSTALLATION
TO INSTALL THE J-CHANNEL EXTRUSION, ROTATE UP AND
UNDER THE SHELFCLAMP. ROTATE DOWN TO SET INTO
PLACE.

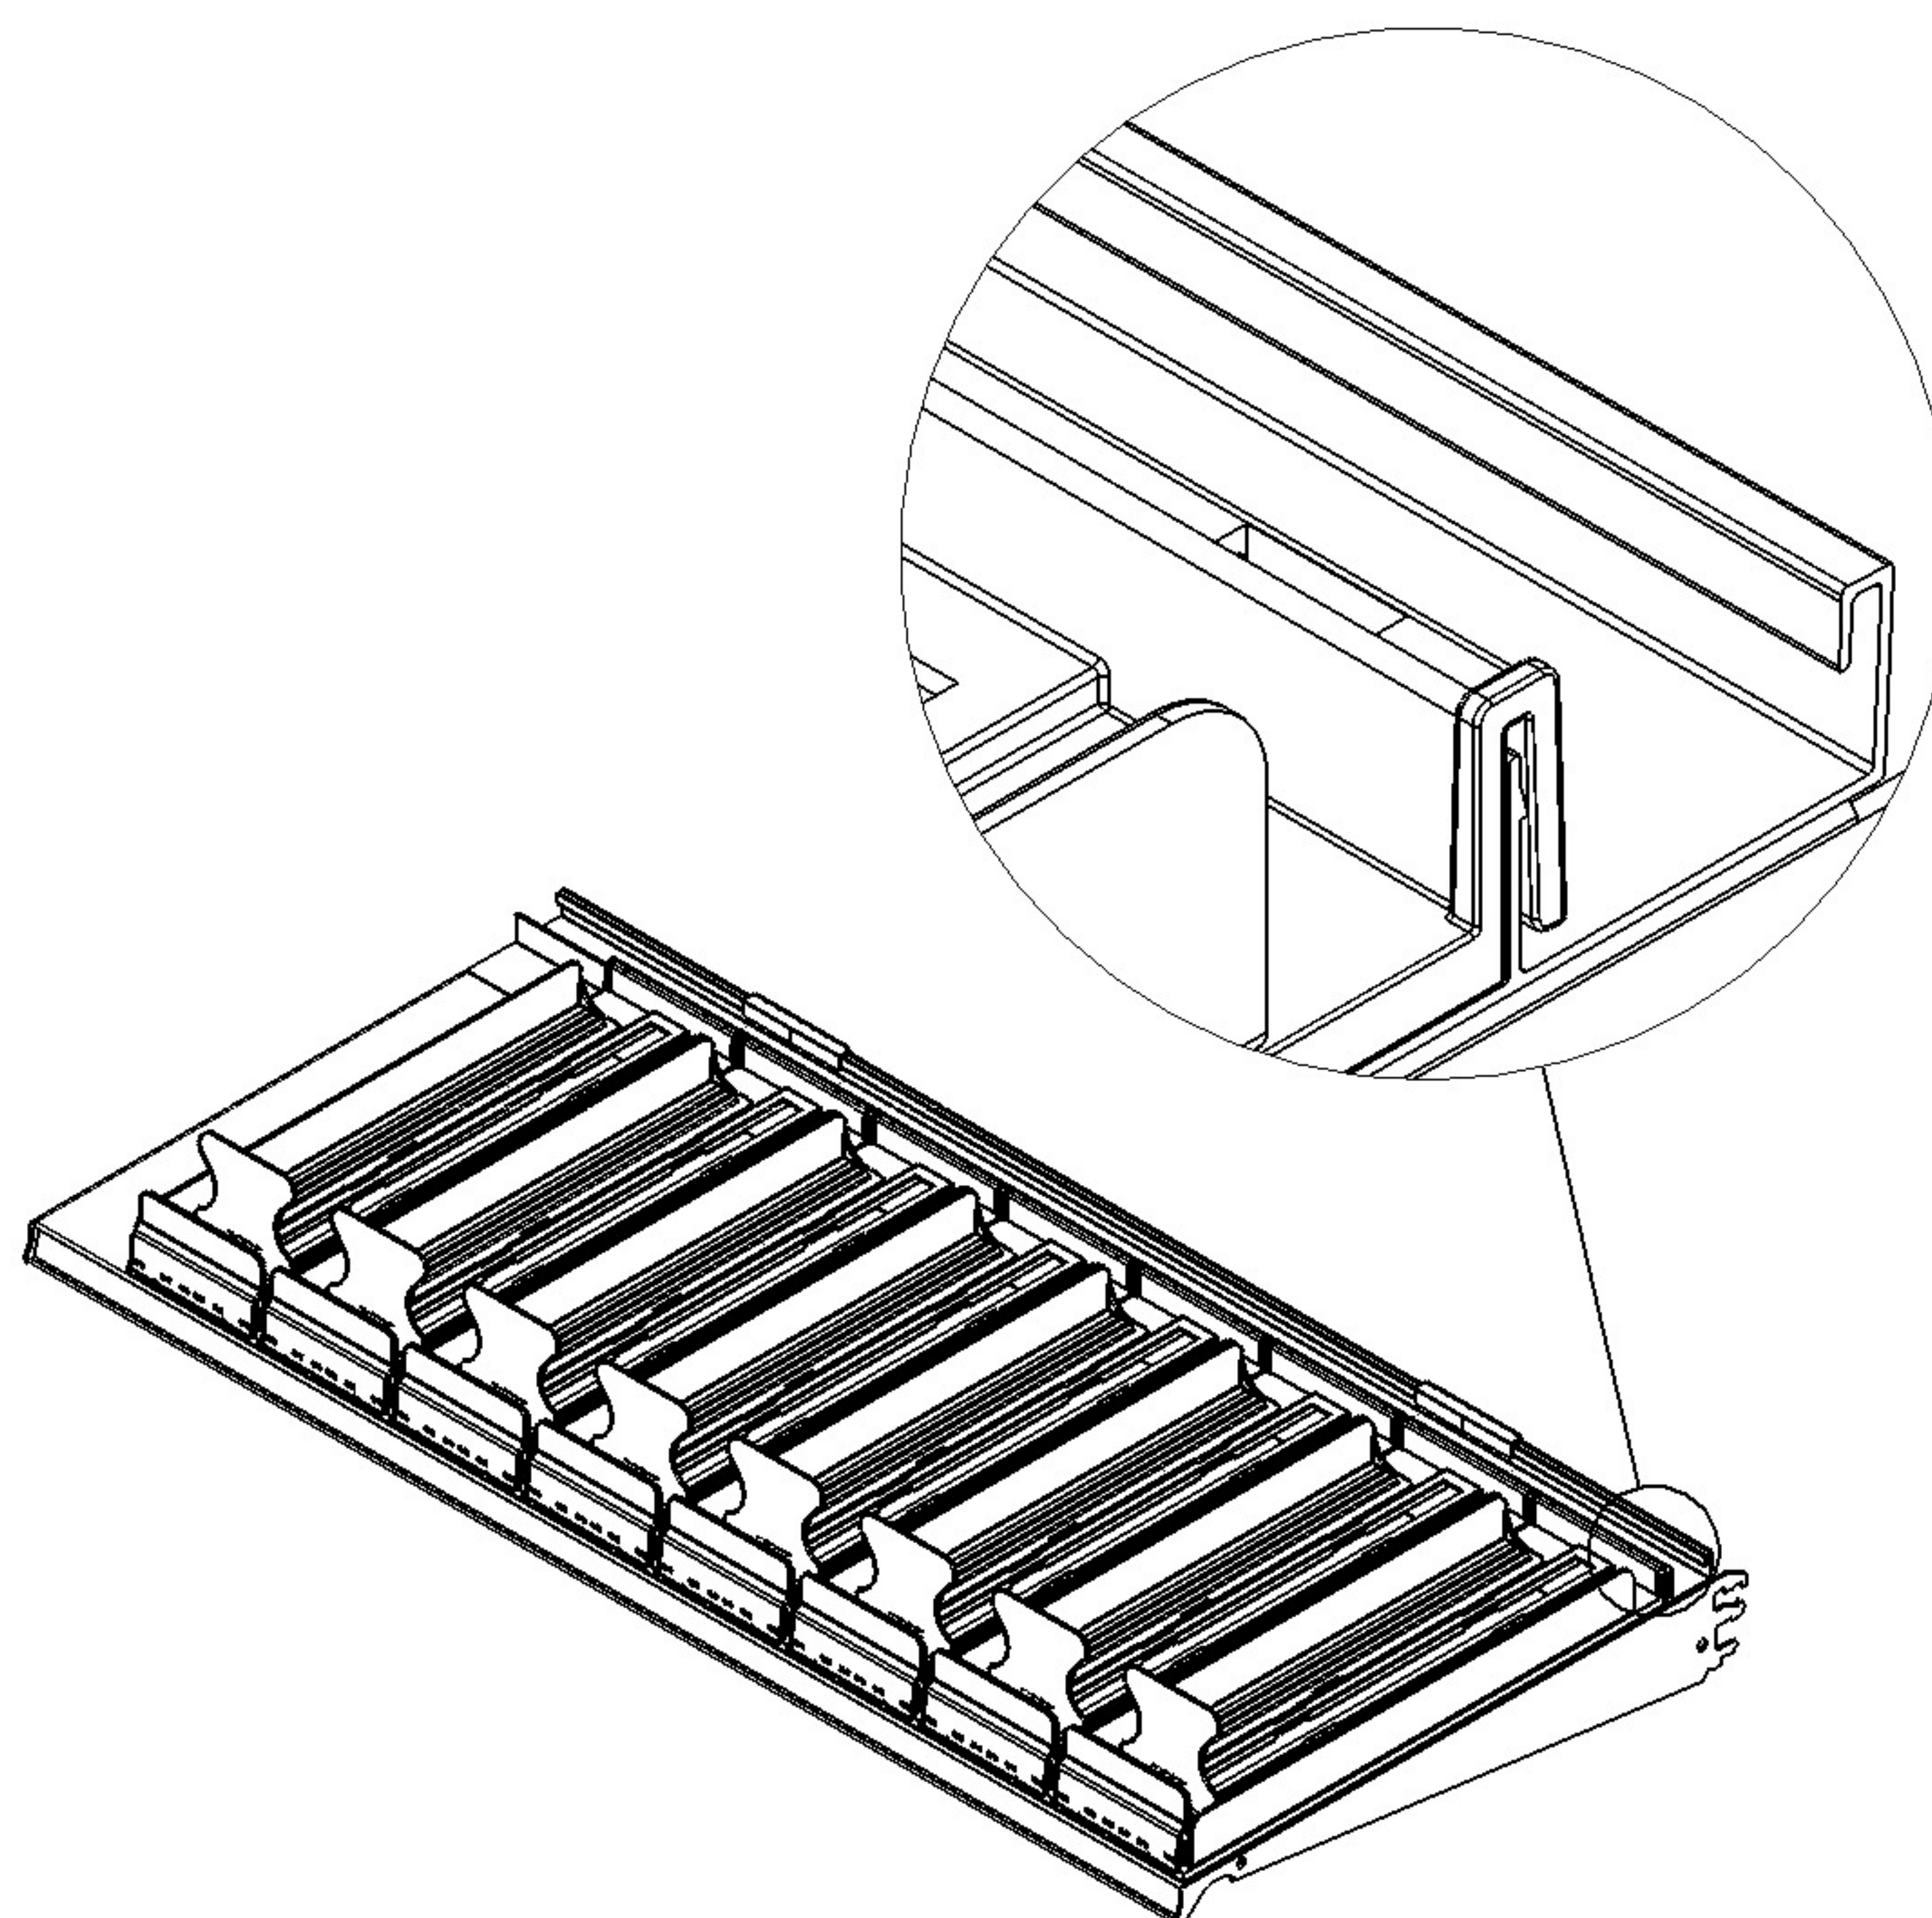

STEP C4: TRAY PLACMENT ONTO SHELF WITH CHANNEL
COMPLETE STEP 2 AND STEP 3 USING THE J-CHANNEL
EXTRUSION AS THE ATTACHMENT. PLACE TRAY ONTO
SHELF BY LIFTING REAR OF TRAY AND CLIPPING OVER J-
CHANNEL EXTRUSION.